



USB Printing Support


If you see “USB Printing Support” under Unspecified (1) column in Devices and Printers, it means the driver was not installed properly...see below:

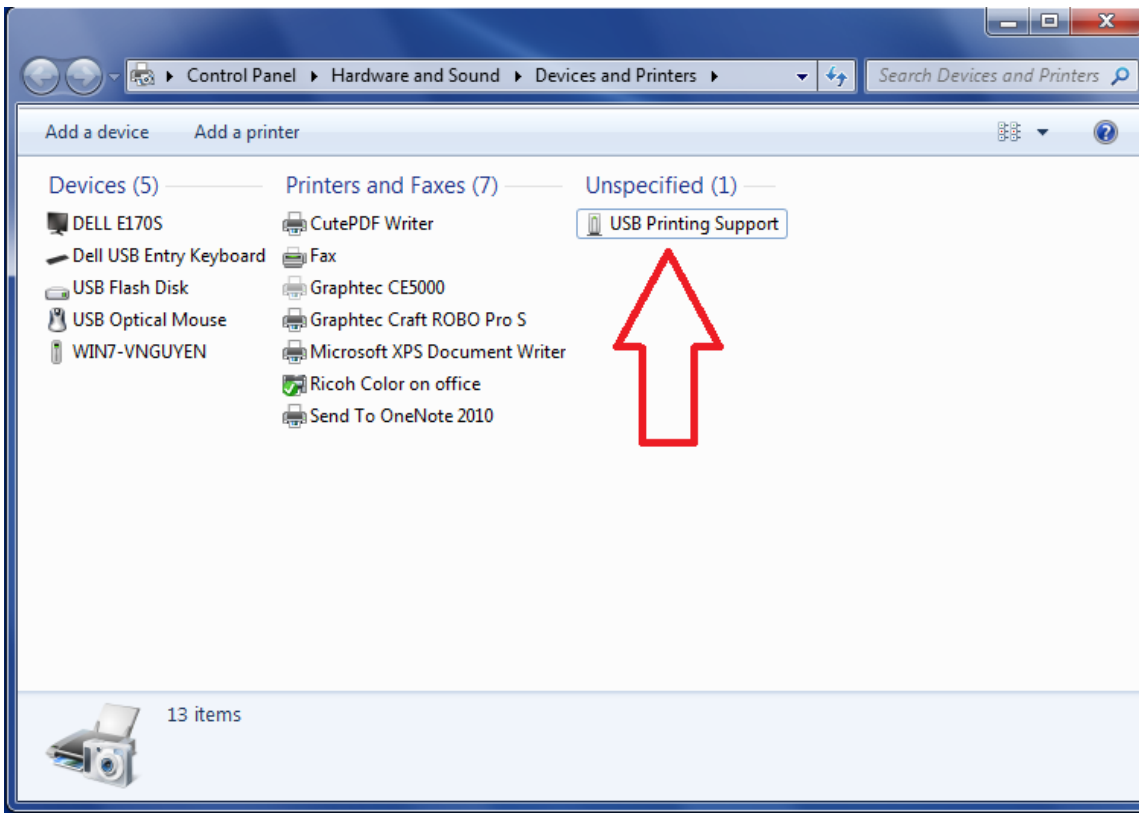


Right click on the USB Printing Support and select Properties...see below:

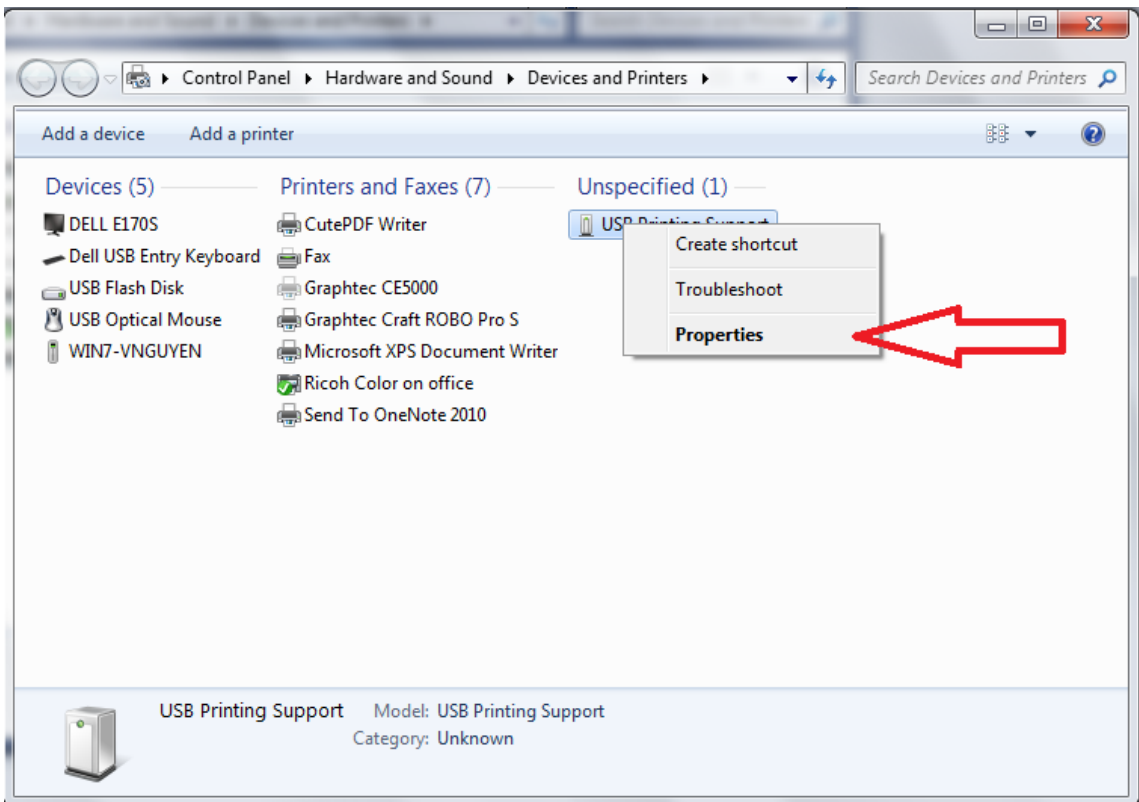


Select **Hardware** tab and then select **Properties** button...see below:

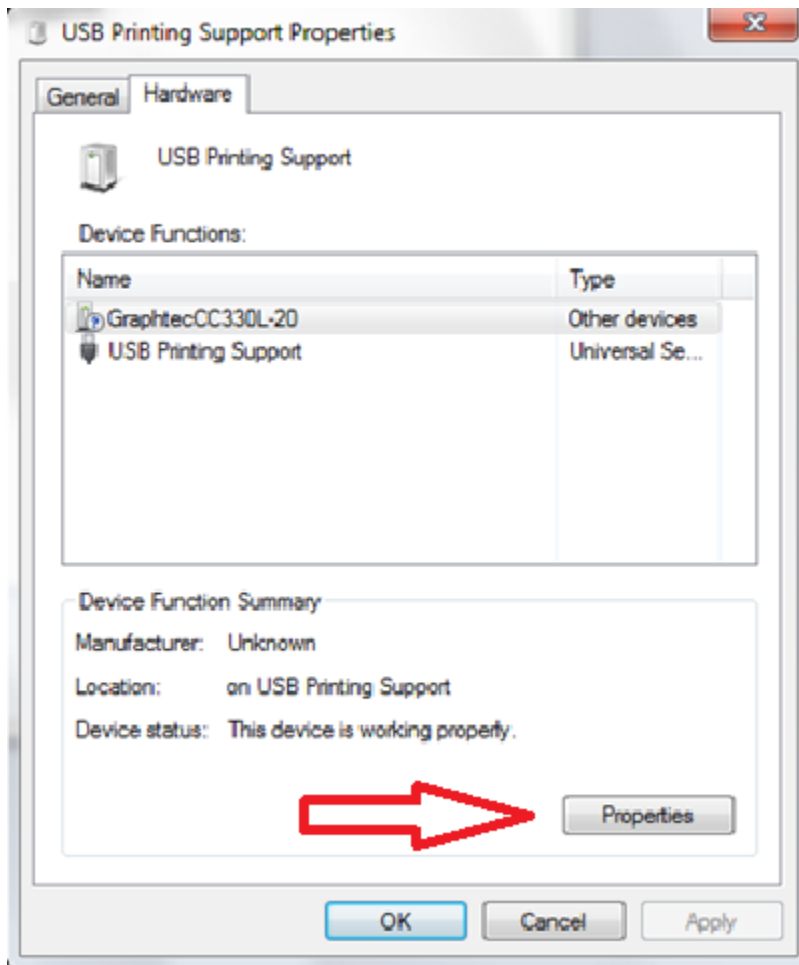


Select **"Change settings"** button...see below:

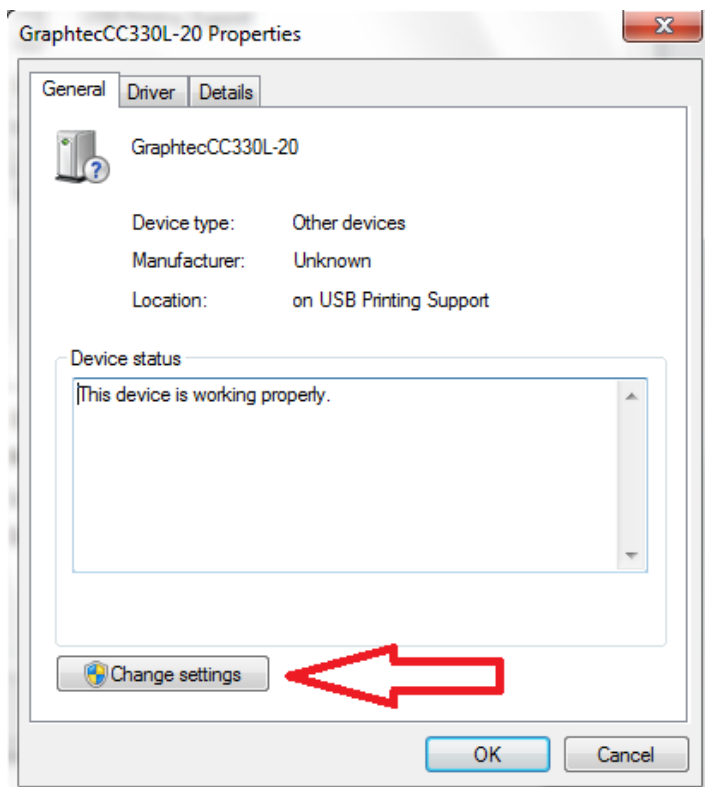


Click on **Driver** tab and then **“Update Driver”** button...see below:

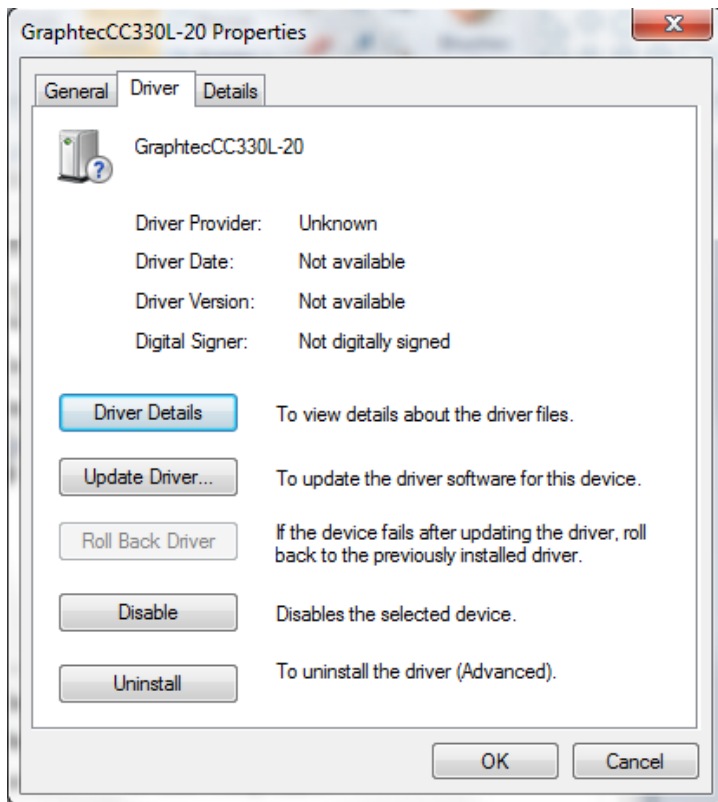


Click on the **“Browse my computer for driver software”** ...see below:

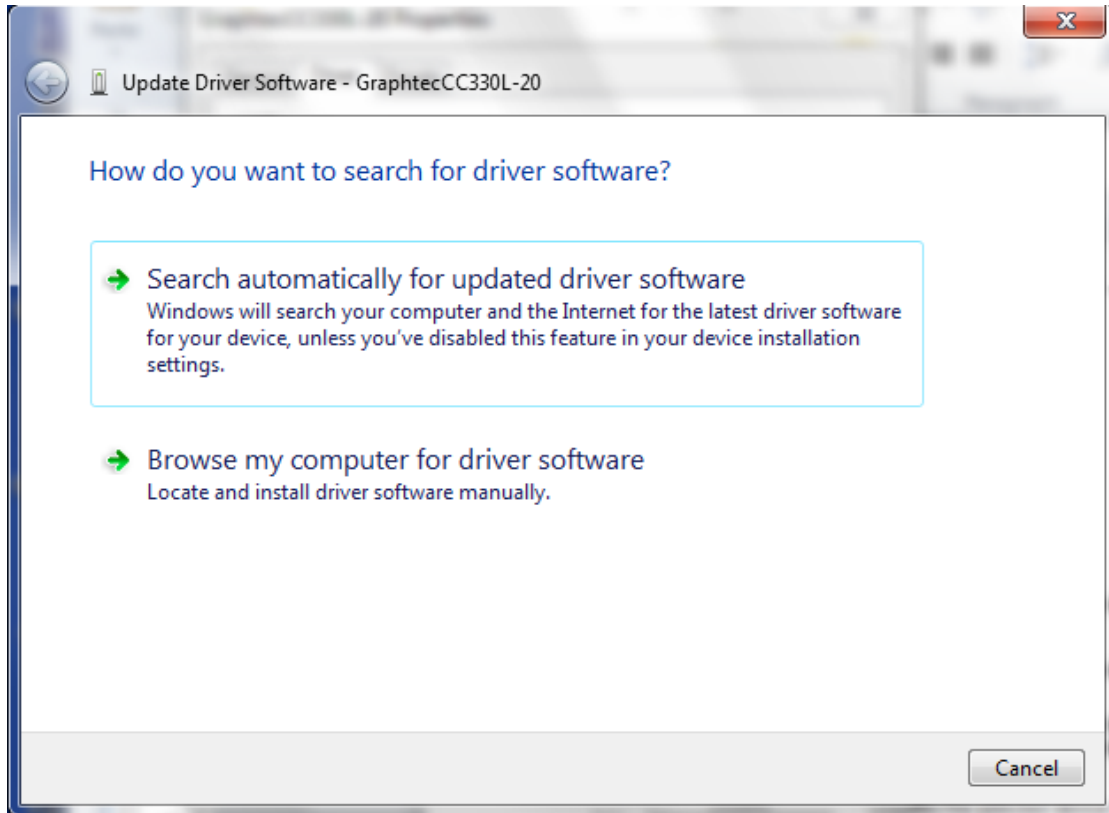



Click on the “Browse...” button...see below:

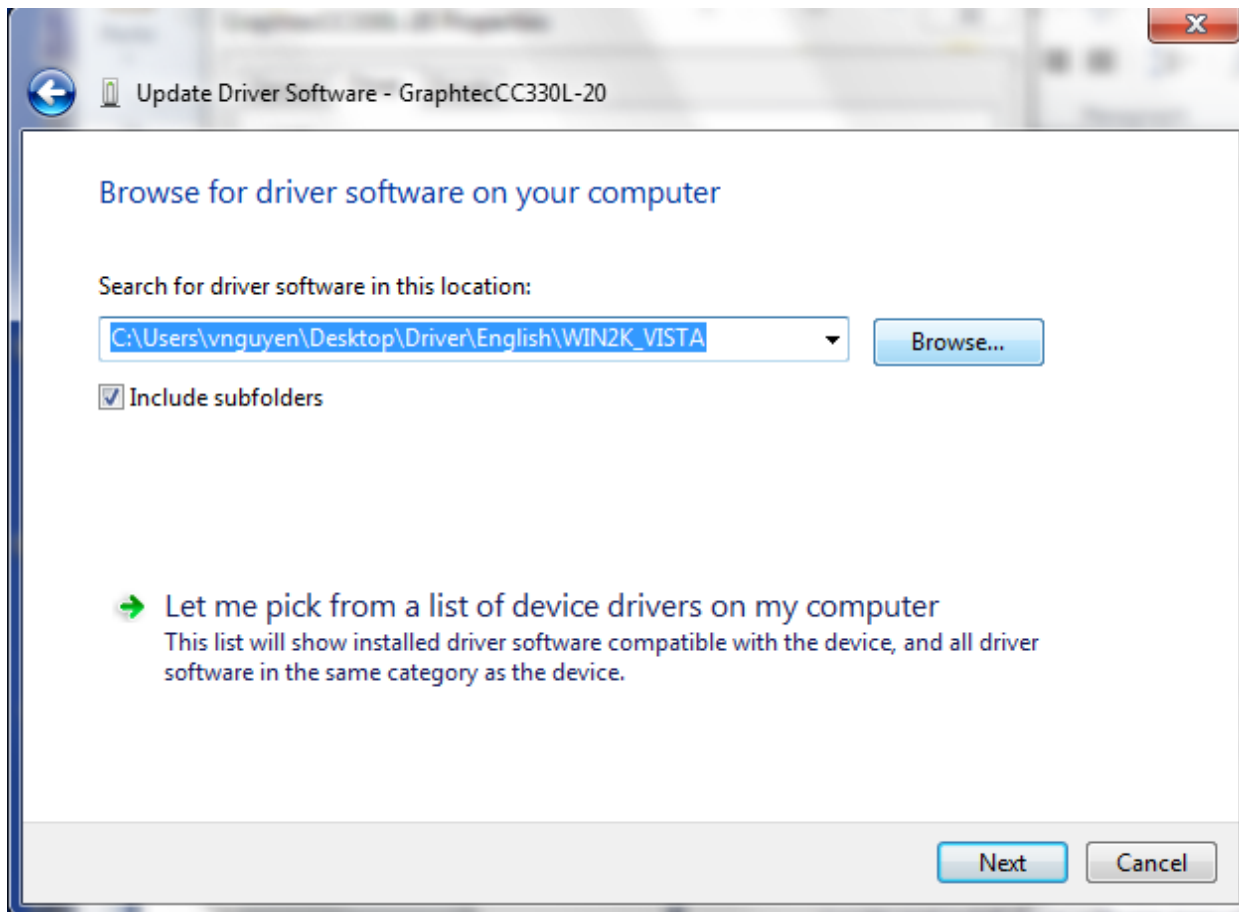

Browse to the “Win2k_Vista_xxx” folder and then click OK.

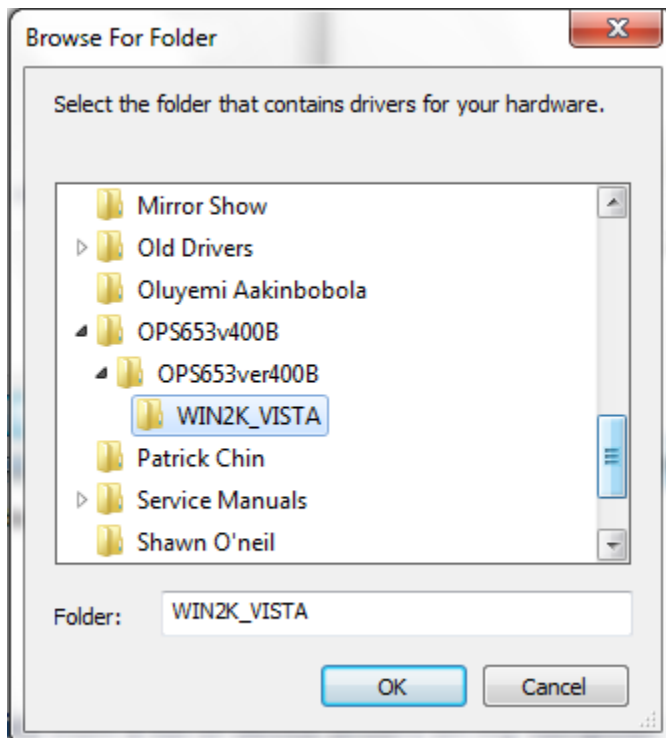

You may see this message: Click on the “Install this driver software anyway”.

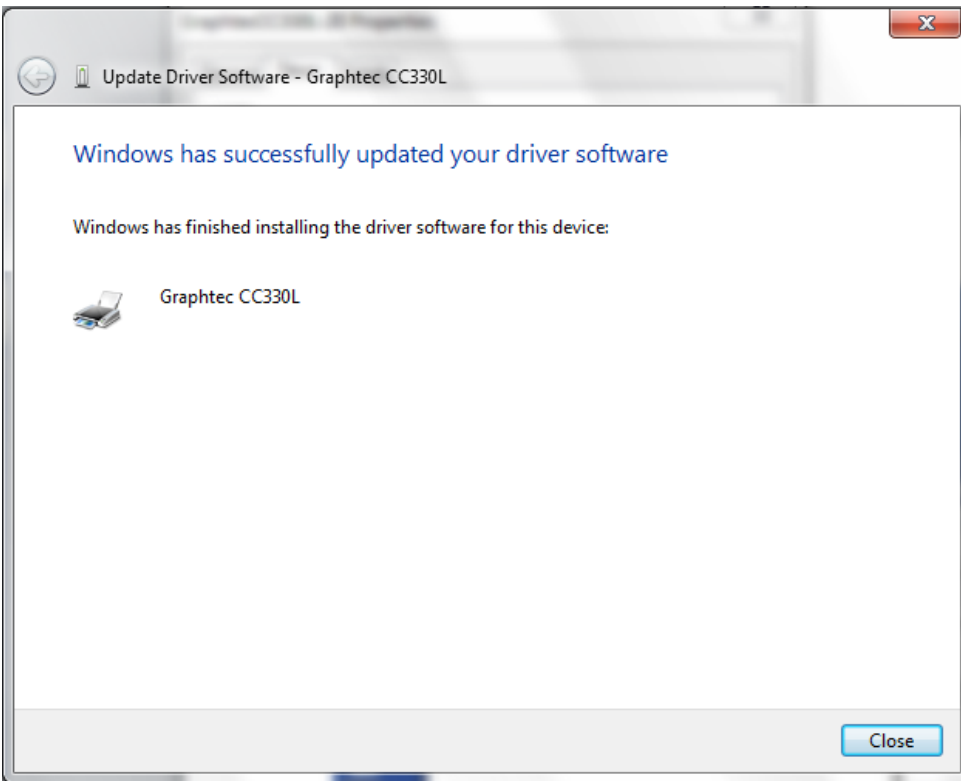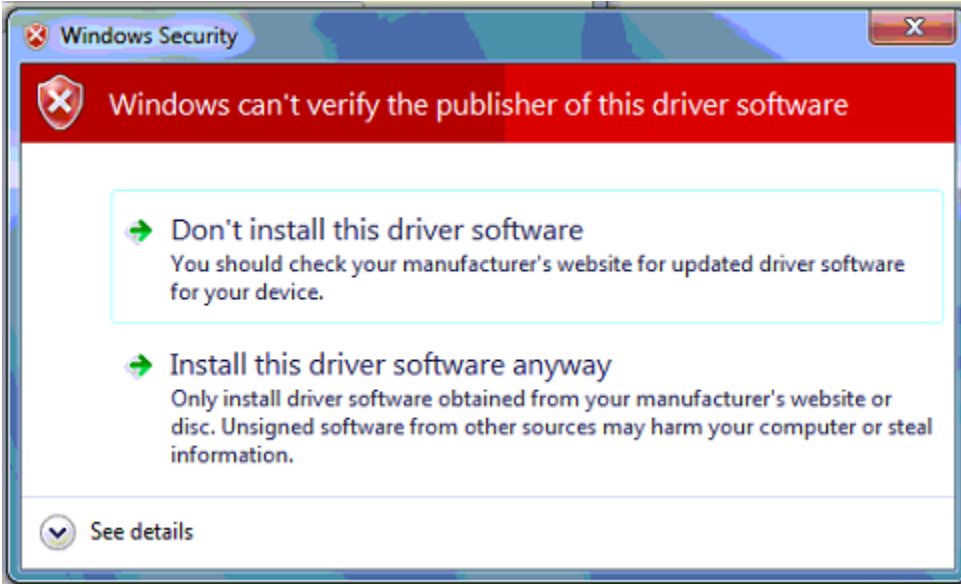

Check in printer folder to see Printer driver is list in Printer and Faxes...see below:



<< Hardware and So... >> Devices and Printers >

Search Devices and Printers

Add a device Add a printer

Devices (5)

- DELL E170S
- Dell USB Entry Keyboard
- USB Flash Disk
- USB Optical Mouse
- WIN7-VNGUYEN

Printers and Faxes (8)

- CutePDF Writer
- Fax
- Graphtec CE5000
- Graphtec Craft ROBO Pro S
- Microsoft XPS Document Writer
- Ricoh Color on office
- Send To OneNote 2010
- Graphtec CC330L



13 items