

## How to update CELite-50 Firmware.

Items needed to update firmware:

- Windows Driver:
  - Download from here: <https://www.graphtecamerica.com/cp-download-ce-lite-50>
  - Windows Driver Installation Instructions: <https://www.graphtecamerica.com/cp-faq-video-window-driver-installation>
- Firmware files:
  - Download from here: <https://www.graphtecamerica.com/cp-download-ce-lite-50>
- How to install firmware:
  - Watch instructional video: <https://www.youtube.com/watch?v=SmZqdNpynWU>

Note: **THIS PROCEDURE CAN ONLY BE DONE ON WINDOWS PLATFORM. DO NOT ATTEMPT USING MAC OS**

