

# FC8000 NETWORK (LAN) INTERFACE

To use the network (LAN) interface, the computer and network hub need to be set up and connected to a network prior to setting up the FC8000. Also, you need to either turn off or temporarily disconnect anti-virus software and the network firewall. If the firewall function is to be turned off, it is recommended to disconnect the network from the internet during set up.

## Connecting with network (LAN)

### CAUTION

- You will need a network (LAN) cables and network hub to connect via LAN. You will need to purchase them separately.
- Structures of the network equipment and necessity of the router function depends on the environment. For description, refer to the manual of the equipment, check with the manufacturer or the network administrator.
- Ethernet is compliant with 10BASE-T/100BASE-TX. Check your network environment.

## Connecting with Network (LAN)

### Operation

 
 
1 Press the **[MENU]** key in the default screen.

▶MENU screen is displayed.



2 Press the **POSITION (▲)** key.

▶INTERFACE setting screen (1/3) is displayed.

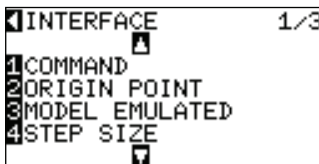

3 Press the **POSITION (▼)** key.

▶INTERFACE setting screen (2/3) is displayed.




### Supplement

 LAN setting is available only when the network (LAN) interface (factory-installed option) is installed.


4 Press the **[2]** key (LAN).

▶LAN setting screen is displayed.

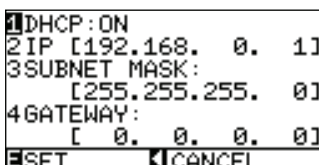

### Supplement

 
- It will return to INTERFACE setting screen (2/3) without changing the settings when you press the POSITION (◀) key (CANCEL).
- MAC address is displayed when the POSITION (▶) key is pressed.

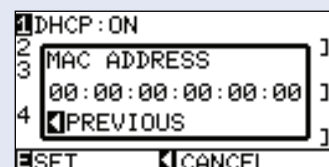

5

Press the [1] key (DHCP).

 ▶ DHCP setting screen is displayed.

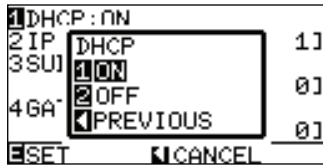

\* What is displayed varies depending on the network environment.

6

Press the [1] key (on) or the [2] key (off).

7

Confirm the setting and press the [ENTER] key (SET).

▶ Setting will be set, and it will return to INTERFACE setting screen (2/3).

8

Press the [MENU] key.

▶ It will return to default screen.

### Supplement

- Setting of the DHCP depends on the structure of the network equipment and the environment. For description, refer to the manual of the equipment, check with the network administrator.
- It will return to LAN setting screen without changing the settings when you press the POSITION (◀) key (PREVIOUS).

### Supplement

- DHCP is set on in the initial setting.
- When the DHCP setting is set to [OFF], see "When DHCP Setting is Turned Off" [P.9-4](#).

## When DHCP Setting is Turned Off

 
Network is set manually.

### Operation

1

Press the [2] key (off) in the DHCP setting screen.


▶ LAN setting screen is displayed.

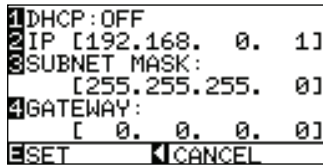

2

Press the [2] key (IP).

 ▶ IP ADDRESS setting screen is displayed.

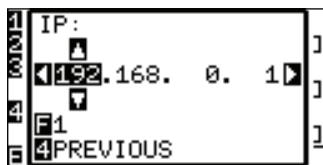

3

Press the POSITION (◀▶) key, and select the value to be set.



4

Press the POSITION (▲▼) key, and increase or decrease the values in the digits to be set.



### Supplement

Digits of settings can be changed by pressing the [FAST] key.

Next Page

5 Repeat steps 3 to 5 and select the 4 values to be set.

6 Confirm the setting and press the [4] key (PREVIOUS).

 
▶ IP ADDRESS will be set, and it will return to LAN setting screen.

7 Press the [3] key (SUBNET MASK).


▶ SUBNET MASK setting screen is displayed.



8 Press the POSITION (◀▶) key, and select the value to be set.



 9 Press the POSITION (▲▼) key, and increase or decrease the values in the digits to be set.




10 Repeat steps 8 to 9 and select the 4 values to be set.

11 Confirm the setting and press the [4] key (PREVIOUS).


▶ SUBNET MASK will be set, and it will return to LAN setting screen.

12 Press the [4] key (GATEWAY).

 
▶ GATEWAY setting screen is displayed.

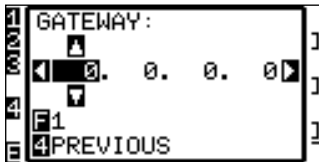

 13 Press the POSITION (◀▶) key, and select the value to be set.



 14 Press the POSITION (▲▼) key, and increase or decrease the values in the digits to be set.



15 Repeat steps 13 to 14 and select the 4 values to be set.

16 Confirm the setting and press the [4] key (PREVIOUS).

▶ GATEWAY will be set, and it will return to LAN setting screen.

17 Confirm the setting and press the [ENTER] key (SET).

▶ Setting will be set, and it will return to INTERFACE setting screen (2/3).

18 Press the [MENU] key.

▶ It will return to the default screen.

### Supplement

Digits of settings can be changed by pressing the [FAST] key.

### Supplement

Digits of settings can be changed by pressing the [FAST] key.

### Supplement

Digits of settings can be changed by pressing the [FAST] key.