

**Craft ROBO Pro & Craft ROBO Pro II (CE5000-40 & CE3000-40)**

***These are the 3 TECHNIQUES you may use when using Cutting Master 2 to Print & Cut (contour cut pre-printed images) whether you are using the carrier sheet or not:***

see techniques 1-3

Use of carrier sheet is required when cutting all-the-way-through media that does not have its own backing: Such as most media, paper and cardstock which have NO ADHESIVE.

Use of carrier sheet is not required ONLY when you are *kiss cutting* media that has its own backing sheet: Such as adhesive vinyls, decals and stickers. **diagram a**

*Kiss cut*—Cutting of the media/paper through only to its backing sheet.

Media: Such as adhesive vinyl, decal, sticker

backing sheet of media  
(protects the blade and Craft ROBO Pro)

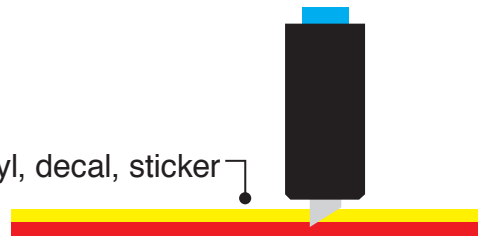



diagram a

*\*Always use the TEST CUT  function of your Craft ROBO Pro to test the cutting force/depth of media with backing sheet prior to sending job.*

see techniques 1-3

# Technique 1

Print & Cut without carrier sheet or *media extension*

## TOP BORDER

2.25"

2.25"

At least 2.25" from edge


At least 2.25" from edge

.5"

.5"

At least .5" from edge

At least .5" from edge

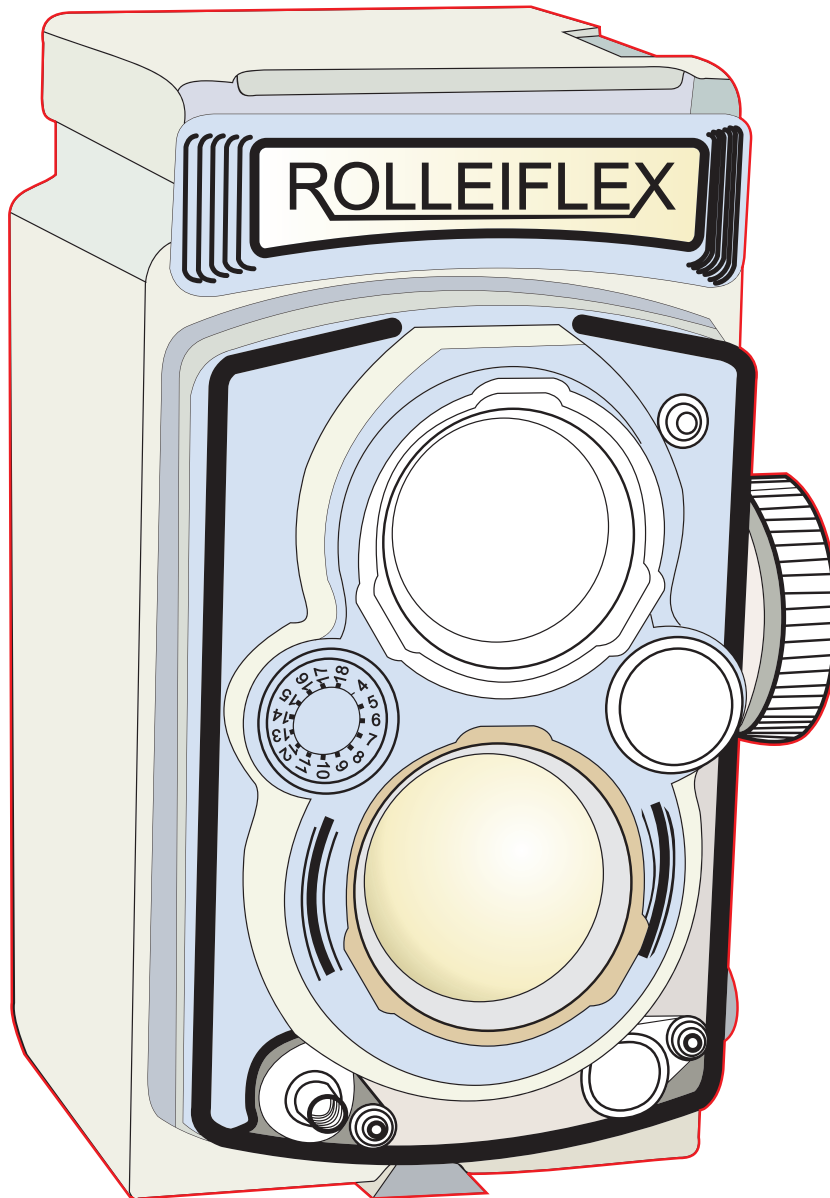

.5"

.5"

At least .5" from edge


At least .5" from edge

Technique 2  
Print & Cut with carrier sheet

2.25"

# CARRIER SHEET

At least 2.25" from edge

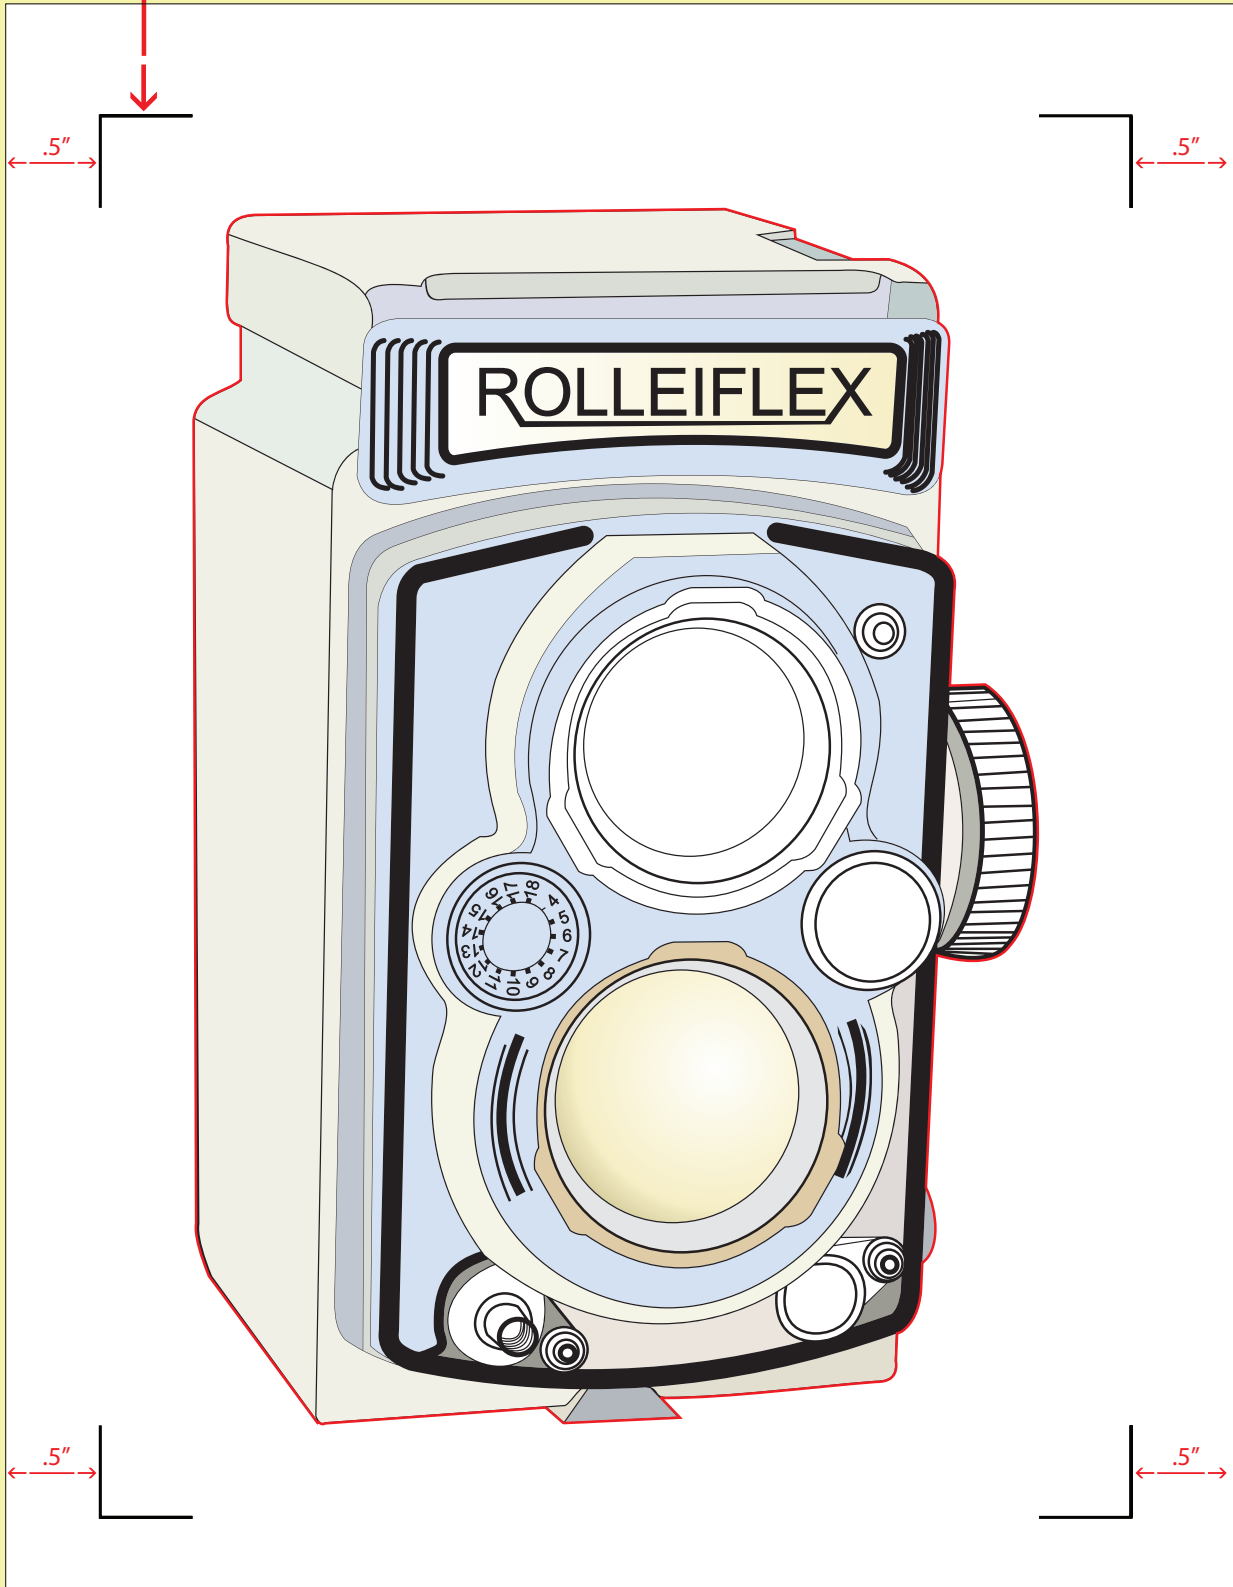

# Technique 3


## Print & Cut with *Media Extension*

### **MEDIA EXTENSION**

*Tape a piece of paper to the top edge of your printed media to extend the TOP BORDER so that you have at least 2.25"*

.5"

.5"

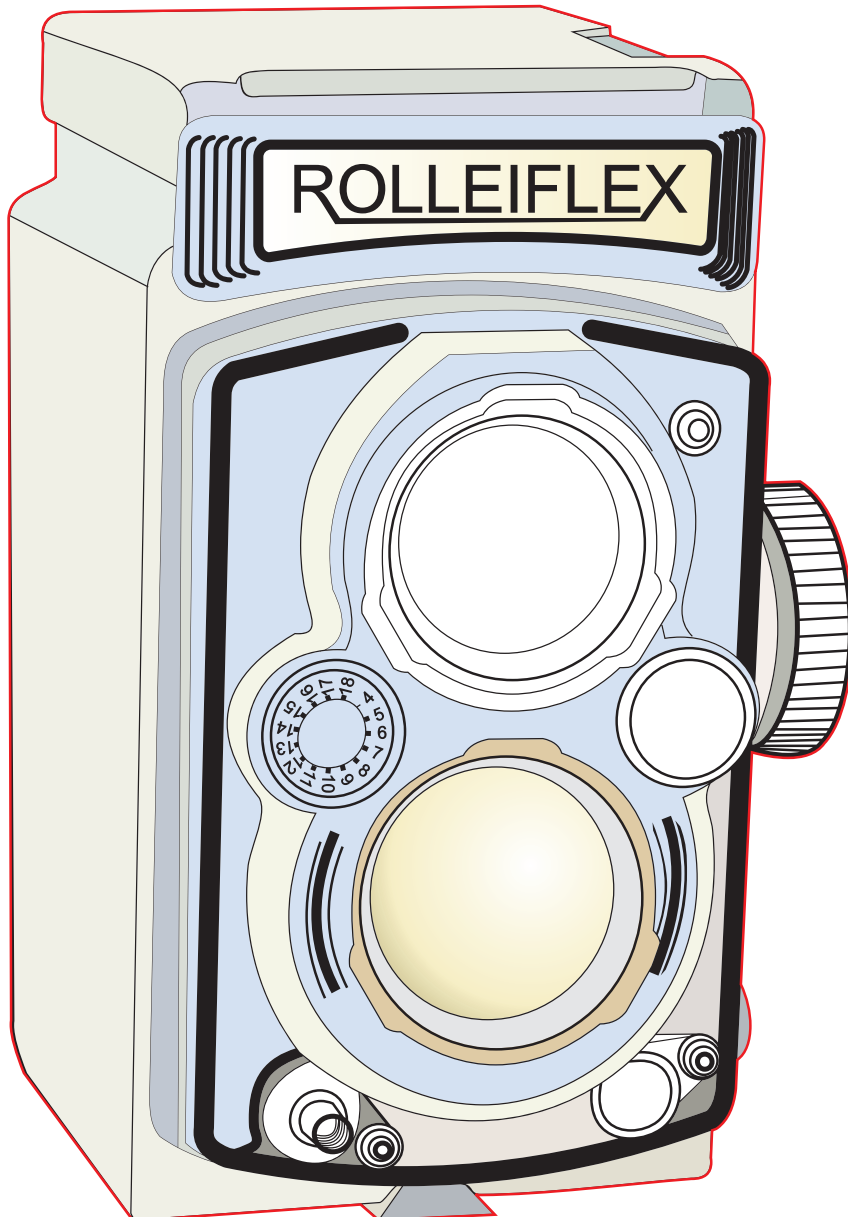

.5"

.5"