


# Setting the Tool Number

Set the tool that is used in each of the tool condition numbers (Setting range: 1 to 3)

## Operation

1 Press the **[CONDITION]** key in the default screen.

►CONDITION setting screen (1/3) is displayed.

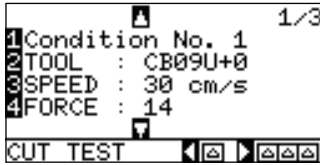


2 Press the **POSITION** (□) key.

►CONDITION setting screen (2/3) is displayed.




3 Press the **[3]** key (ASSIGN TOOL).

►ASSIGN TOOL setting screen is displayed.

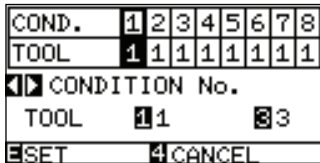

\* Display may vary depending on the mounted tool.

4 Press the **POSITION** (□□) key and select the tool condition number (CONDITION No.)

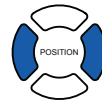


### Supplement

LCD will return to CONDITION screen (2/3) without changing the settings when you press the [4] key (CANCEL).

### Supplement


- Tool number and attached positions

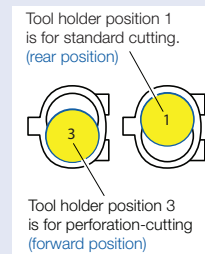

TOOL 1: When using the tool attached in rear position (1) of the tool holder— for standard cutting.

TOOL 3: When using the blade holder attached in the forward position (3), please note that this position **(3) is for perforation-cutting only.**

TOOL 2: *Does not come as standard tool holder (optional tool holder only).*

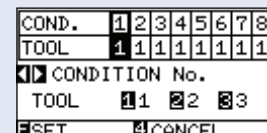

- Attaching methods of the tool

See "Attaching a Tool" in User's Manual [P.2-4](#) and "2-Pen Assignment (Switching the Tools)" [P.14-7](#)