

FC9000 SERIES

ANTI-STATIC STRING INSTALLATION

Parts Needed:


- 2 Anti-Static Strings
- 4 Mounting Magnets



Front View Install




Rear View Install

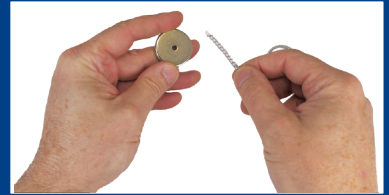

Hold Magnet Shiny Side Up



Pull String Through Hole

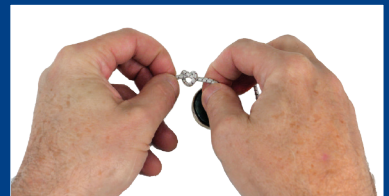

Tie Single Knot



Pull Knot Tight into Hole



Trim Excess Line



**Place on metal surface
of frame below chassis.**