


# GL220\_820APS

Application software

## **USER' S MANUAL**

MANUAL NO. APS(GL220\_820)-UM-151

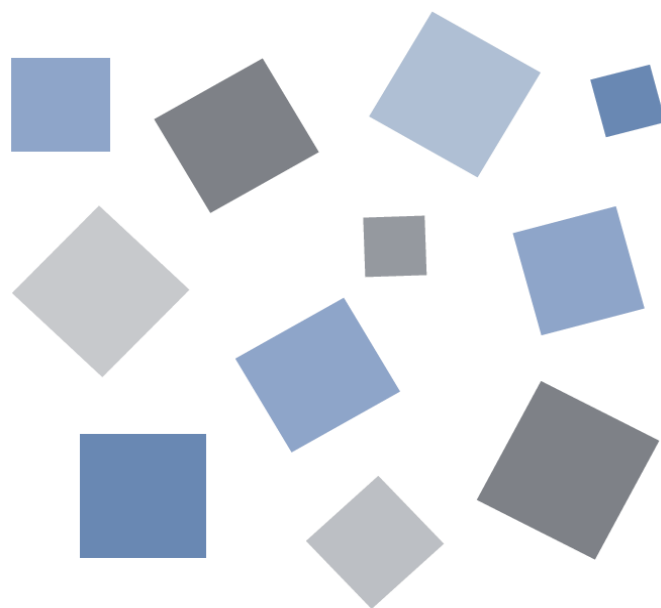

# GRAPHTEC

# Contents


1. Main Features .....	4
1-1.A Variety of Display Formats.....	4
1-2.Simple and Easy to Use.....	5
1-3.Multichannel Measurement.....	5
1-4.Export to Direct Excel File Function.....	6
1-5.Thumbnail Waveform Display.....	6
1-6.CSV File Batch Conversion.....	6
1-7.Calculation functions.....	7
1-8.Printing Function, Screen Save Function.....	7
1-9.Send Email when Alarm is Generated.....	7
1-10.Help Function.....	7
2. System Requirements.....	8
3. Connecting to a PC (Personal Computer).....	9
3-1.Connecting via USB.....	9
3-2.Connecting via LAN.....	10
3-3.Setting USB ID or IP Address.....	11
3-3-1. USB Settings.....	11
3-3-2. TCP-IP Settings (GL820).....	11
3-3-3. Example of TCP-IP Settings.....	12
4. Installing the USB Driver.....	13
5. Installing the Application Software.....	14
6. Basic Operating Procedure.....	15
6-1.Controlling Device.....	15
7. Launching and Exiting the Software.....	16
7-1.Launching the Software.....	16
7-2.Exiting the Software.....	16
8. PC Connection Settings.....	17
9. Display Screens.....	19
9-1.Y-T (Main Screen).....	20
9-2.Y-T Zoom.....	22
9-3.Digital.....	23
9-4.Report.....	24
10. Settings Screens.....	25
10-1.AMP Settings.....	25
10-1-1. Auto Zero Setting.....	27
10-1-2. Span Settings.....	27
10-1-3. Scaling Settings.....	28
10-2.Data Capture Settings.....	28
10-3.Trigger/Alarm Settings.....	31
10-3-1. Trigger Level Condition.....	33
10-3-2. Alarm Condition.....	35
10-3-3. Send Email when Alarm is Generated.....	36

10-4. Report Settings .....	37
10-5. Other Settings .....	38
11. FILE menu .....	40
11-1. Open Data .....	40
11-2. CSV File Batch Conversion .....	41
11-3. Print Screen .....	42
11-4. Save Screen .....	43
11-5. CSV Config .....	43
12. Replay Data .....	44
12-1. Y-T .....	44
12-2. Digital .....	45
12-3. XY .....	46
12-4. Superimpose/Link .....	47
12-5. Convert then Save .....	48
12-6. Scale Operations .....	48
12-7. Scroll bar .....	48
13. Other Functions .....	49
13-1. Alarm .....	49
13-2. Statistics/Log .....	49
13-3. About Icons .....	50
13-3-1. Waveform Operation .....	50
13-3-2. Input Comments .....	51
13-3-3. Move/Search .....	52
14. Operating Procedure .....	53
14-1. Capture Settings .....	53
14-1-1. Settings related to AMP .....	53
14-1-2. Settings related to data capture .....	54
14-2. Start .....	55
14-2-1. Displaying Past Data during a Data Capture Operation .....	55
14-3. Stop .....	56
14-4. Replay Data .....	56
14-4-1. Replaying File .....	56
14-4-2. Waveform display .....	57
14-4-3. Cursor Operations .....	57
14-4-4. Input Comments .....	58
14-4-5. Data Search .....	59

# 1. Main Features


## 1-1. A Variety of Display Formats

Y-T View, Y-T Expanded View, Digital View, Report View are available. A large, easy-to-see screen is the characteristic of this unit.

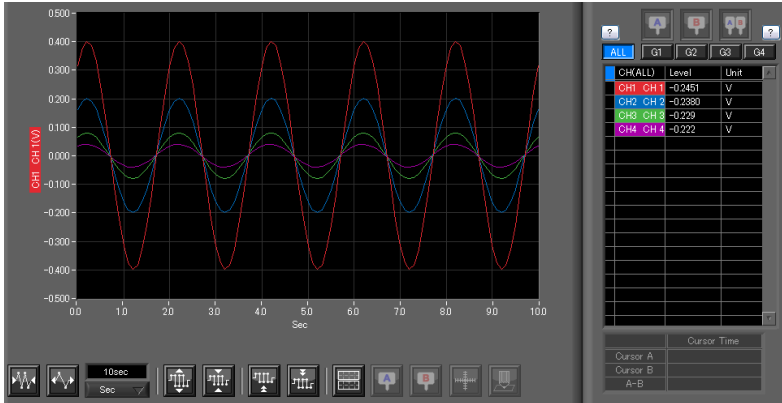

### Y-T View

This graph shows data with the input signal levels on the Y-axis and the time on the X-axis. It can display a waveform and digital values of each channel at the same time. The control icons in the lower part of the screen allow you to scale up and down the time axis, X-axis, etc. This graph can be displayed in two or five split screens, each showing different signals.

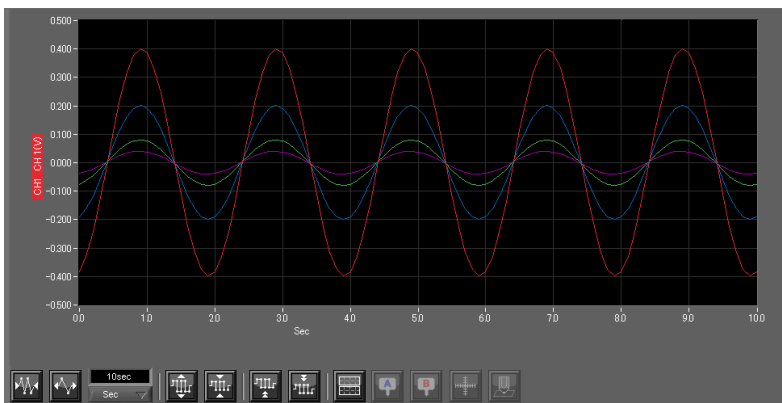

### Y-T Zoom View

Displays waveforms along an expanded time axis while hiding digital values.



### Digital View

Displays digital values of each channel in a large, easy-to-read numbers.

No.	Date Time	ms	CH1(mV) CH 1	CH2(degC) CH 2	CH3(mV) CH 3	CH4(degC) CH 4	Algrm1 (1234567890)	AlgrmOut (1234)
4	2010-03-01 15:3039	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
5	2010-03-01 15:3040	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
6	2010-03-01 15:3041	543	-0.0016	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
7	2010-03-01 15:3042	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
8	2010-03-01 15:3043	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
9	2010-03-01 15:3044	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
10	2010-03-01 15:3045	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
11	2010-03-01 15:3046	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
12	2010-03-01 15:3047	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
13	2010-03-01 15:3048	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
14	2010-03-01 15:3049	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
15	2010-03-01 15:3050	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
16	2010-03-01 15:3051	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
17	2010-03-01 15:3052	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
18	2010-03-01 15:3053	553	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
19	2010-03-01 15:3054	553	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL


	CH1(V) CH 1	CH2(V) CH 2	CH3(V) CH 3	CH4(V) CH 4
Average	-0.0014	-0.01	-0.01	-0.01
Max	-0.0013	-0.01	-0.01	-0.01
Min	-0.0016	-0.01	-0.01	-0.01

### Report View

Displays the report results (daily report) in real time when the report function is enabled.

## 1-2. Simple and Easy to Use


Large icons make it simple and easy to control the waveforms. Time axes, spans, waveform positions can be changed easily. Also, you can maximize a window to fit the screen.

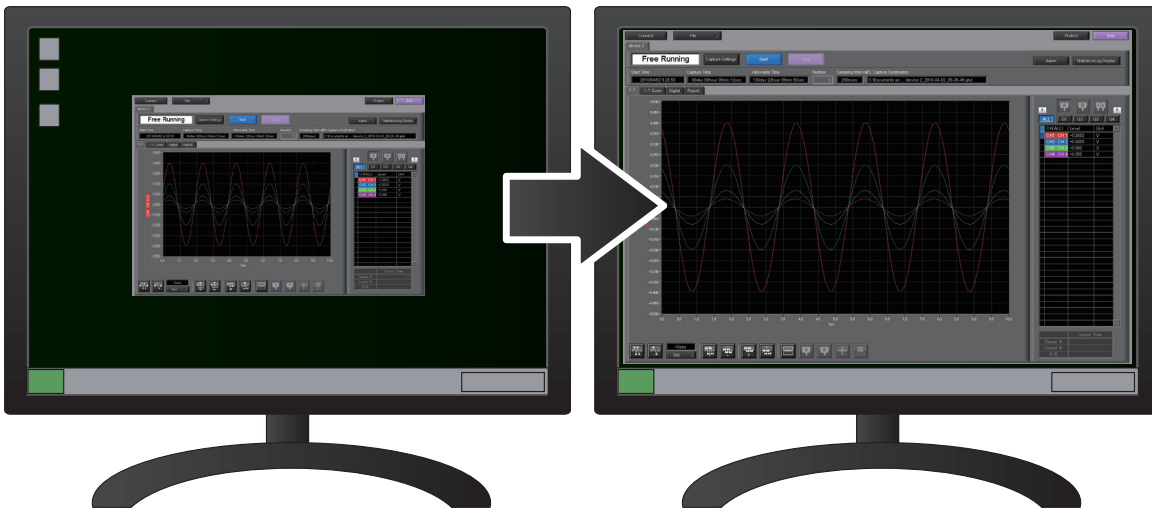

## 1-3. Multichannel Measurement

A maximum of ten device with multiple devices connected. (maximum of 500 channels)

Displayed waveforms can be grouped, and you can select and check a desired waveform among many of them (up to four groups can be set per device).

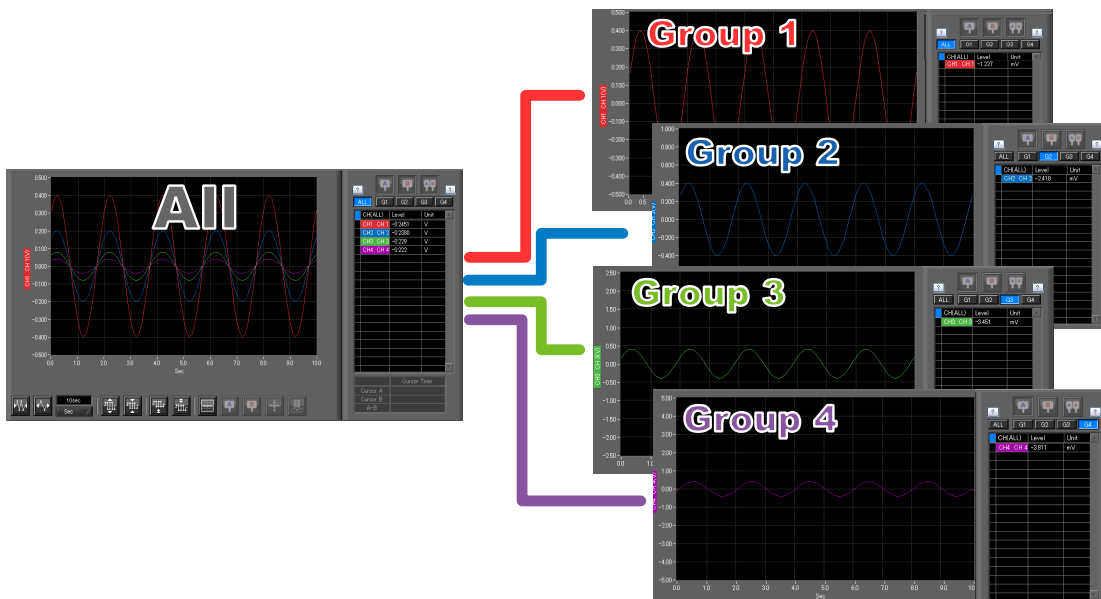


## 1-4. Export to Direct Excel File Function

Captured data can be exported directly to an Excel file and displayed as graphs. Ready-to-use template files are provided as standard for your convenience. (Note: The Microsoft Excel program must be installed.)


## 1-5. Thumbnail Waveform Display

Before replaying captured data, the waveforms can be checked by referring to the small images (thumbnails) provided next to each file name. These thumbnails provide easy confirmation of the data before opening the file.

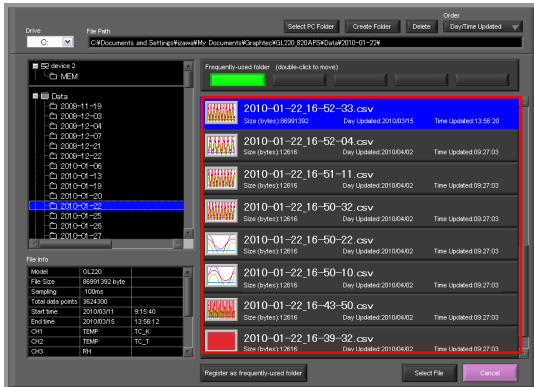

## 1-6. CSV File Batch Conversion

Data captured in binary files is converted in a batch to CSV files.

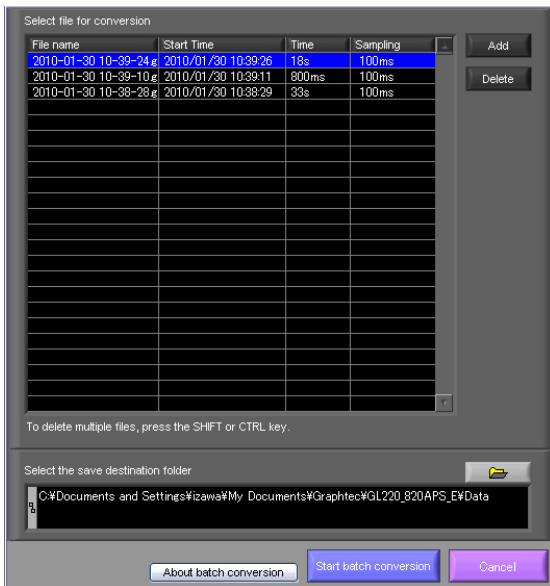


## 1-7. Calculation functions

The available calculation functions are Statistical Calculation and Calculation between Channels.

Statistical Calculation allows you to check the maximum, minimum, and average values of all the channels as numeric values.

Calculation between Channels allows you to set four arithmetic operations between channels up to four at the maximum and check the results as waveforms.

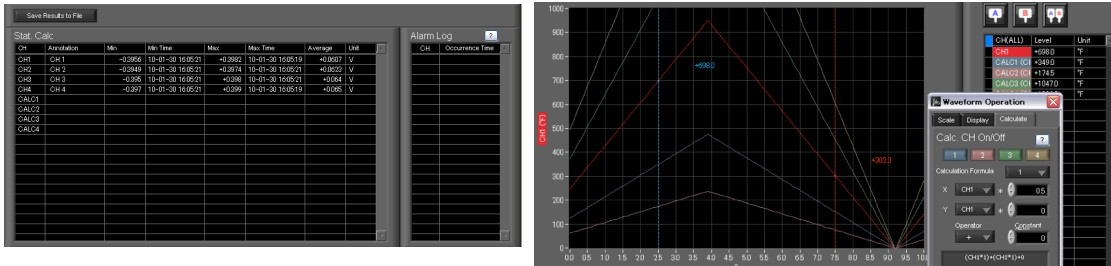

## 1-8. Printing Function, Screen Save Function

The waveform screen can be printed out on a printer, and screen copies saved to a file.

(Note: To use the printing function, the device must be connected to a printer.)

## 1-9. Send Email when Alarm is Generated

When an alarm is generated, this function enables a notification email to be sent to a mobile phone, for example, thereby ensuring that a check can be performed if required.

(\* You need an environment in which e-mail can be transmitted. The mail send function is available only during capturing. No mail is sent even if an alarm is generated during the Free Running status.)

## 1-10. Help Function

Help buttons that provide simple descriptions of the various functions are assigned to each of the menu setting items to provide ease of use.

**HELP**

Up to maximum of four calculations can be performed.  
The calculation unit is the unit specified for CH1 on the X axis. The calculation results are displayed as a Y-T waveform, and in the digital display area.  
The scale used is the scale specified for CH on the X axis.

<<Click to close the window>>

## 2. System Requirements

Make sure that the computer on which you plan to install the software meets the following requirements.

Item	System requirements
OS	Windows XP Windows Vista 32Bit/64Bit Windows 7 32Bit/64Bit Note: Supported edition (Ultimate Enterprise Professional HomePremium)
CPU	Pentium 4 : 1.7GHz or higher
Memory	256MB or more (512 MB or more is recommended.)
HDD	200 MB additional space is required for installing software. (1GB or more free space is recommended.)
Display	1024 x 768 resolution or higher, 65535 colors or more (16-bit or more)
Other	USB port, TCP-IP port, CD-ROM drive (for installing from CD) Microsoft Excel software (for the Export to Direct Excel File and Display in Excel functions)

● CHECKPOINT

- Even when using a PC that meets the system requirements, measurement data may not be captured correctly depending on the PC status (e.g. running other applications or insufficient memory capacity in the storage media used). Exit all other applications before capturing data to the internal hard disk.
- While you are using this software, do not activate any other software. Whenever possible, avoid manipulations or processing of other software than this one (e.g., screen saver, virus check, file copy and transfer, and file search processing, etc.).




# 3. Connecting to a PC (Personal Computer)


## 3-1. Connecting via USB

The GL is connected to a PC via a USB cable.

GL820

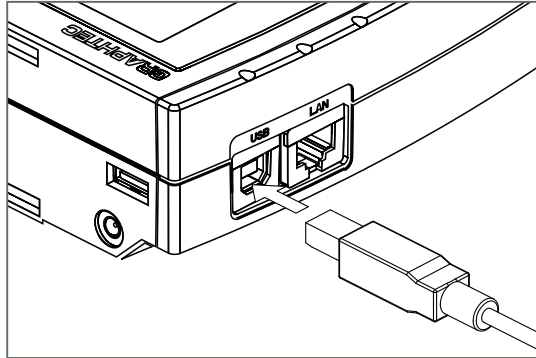


GL220

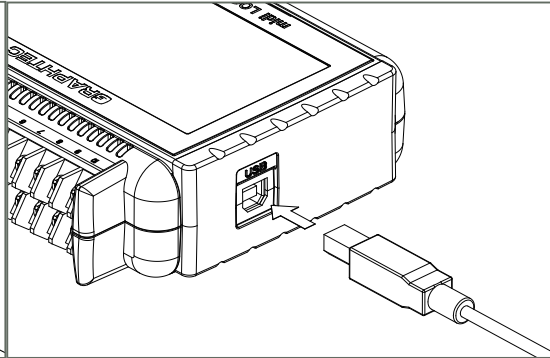

● CHECKPOINT


- When using a USB cable, a USB driver must be installed in the PC. Refer to the "USB Driver Installation Manual" for the installation procedure.
- LAN connector. Make sure the cable is inserted into the correct connector.

Use an A-B type USB cable to connect the GL to a PC.

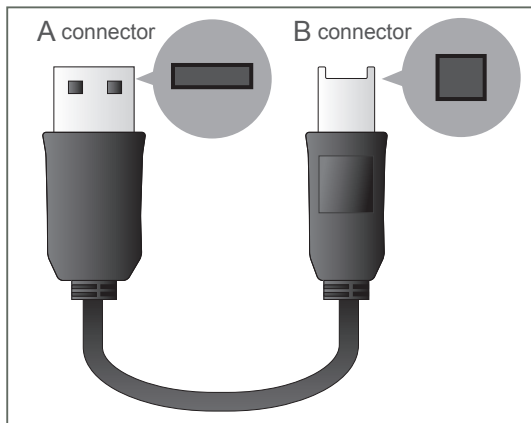

## 3-2. Connecting via LAN

It can also be connected via a LAN cable. (only for the GL820 and GL800)

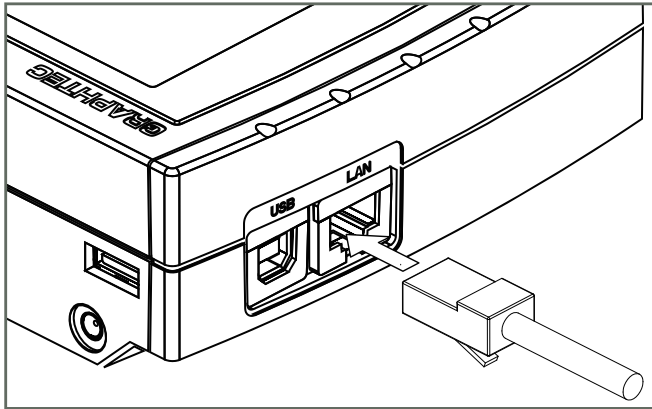


Depending on your usage, use one of the following types of LAN cables.

### •LAN Cable Types

Use a crossing cable when connecting directly to a PC, without using a hub.



Use a straight cable to connect to a PC through a hub.

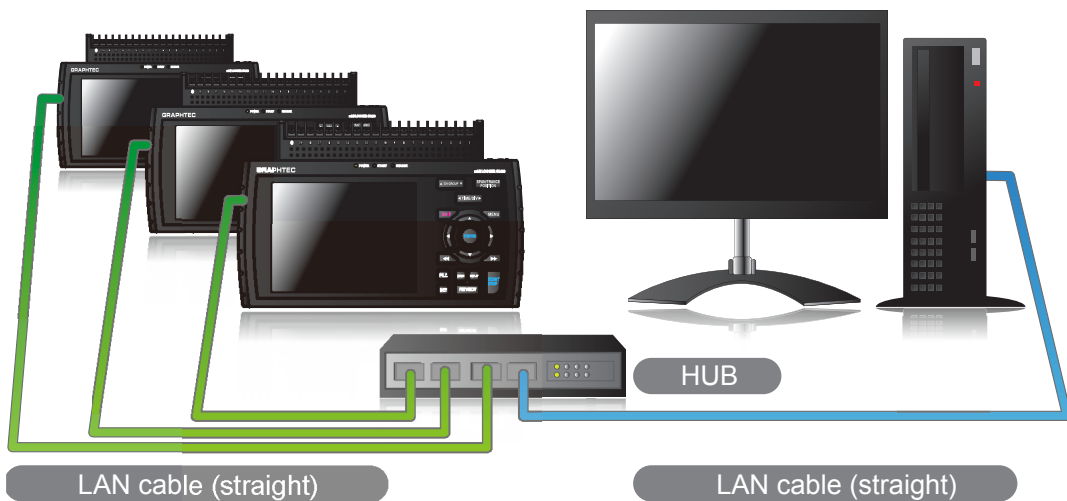


## 3-3. Setting USB ID or IP Address


To connect to a PC, configure the device's interface settings.

### 3-3-1. USB Settings

For GL220: Press the MENU key five times to open "OTHR Settings". Input the "USB ID". The settings will be in effect when the power of the device is turned off and restarted.

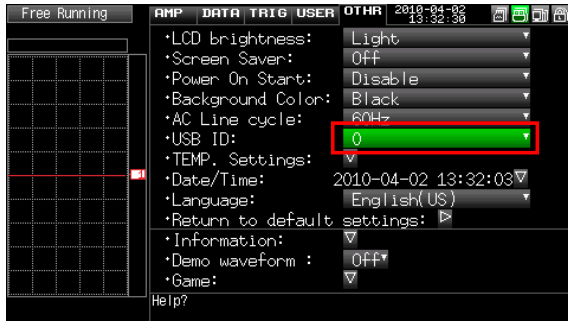

For GL820: Press the "MENU" key five times to open "I/F Settings". Input the "USB ID". The settings will be in effect when the power of the device is turned off and restarted.

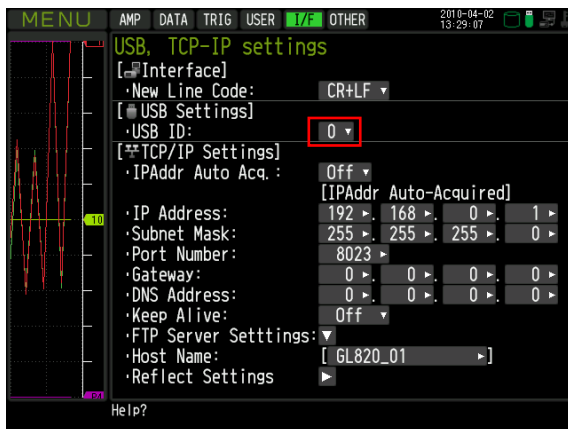

#### ● CHECKPOINT

After changing the USB ID setting of this unit, turn off and on the power of this unit.


### 3-3-2. TCP-IP Settings (GL820)

Press the [MENU] key five times to open the [I/F] menu. Set the [IP Address], [Subnet Mask], [Port Number], [DNS Address] and select [Reflect Settings] to accept the changes.

#### • Using Auto IP Address Acquisition

If there is a DHCP server in the same segment of the connected network, Auto IP Address Acquisition is available.

Refer to chapter 3 (5), "I/F Settings" in User's Manual for details.

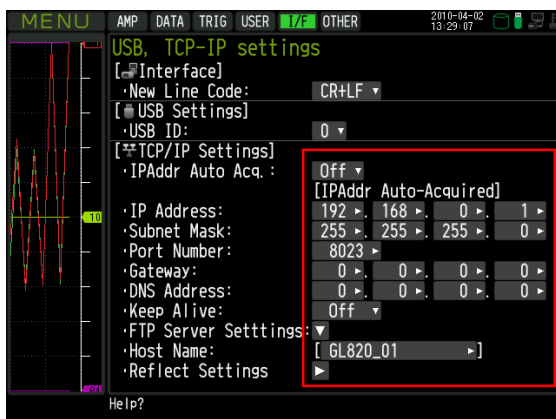

### 3-3-3. Example of TCP-IP Settings

Connecting one PC and one GL820

Refer to the following settings if you are not connecting to a corporate LAN or other networks.

Connect GL820 to a PC with a crossover cable.


PC's IP Address	192.168.1.1
GL820's IP Address	192.168.1.2

#### ● CHECKPOINT

- In this case, always set the subnet mask to "255.255.255.0".
- In this case, always set the port number to "8023".

#### 3-3-3-1. Setting PC's IP Address (Windows XP)

Select "Start" button → "Control Panel" → "Network Connections" → "Local Area Connection" → "Properties" → "Internet Protocol (TCP/IP)" → "Properties", click to select "Use the following IP address" check box, set "IP address" and "Subnet mask", and then click "OK".

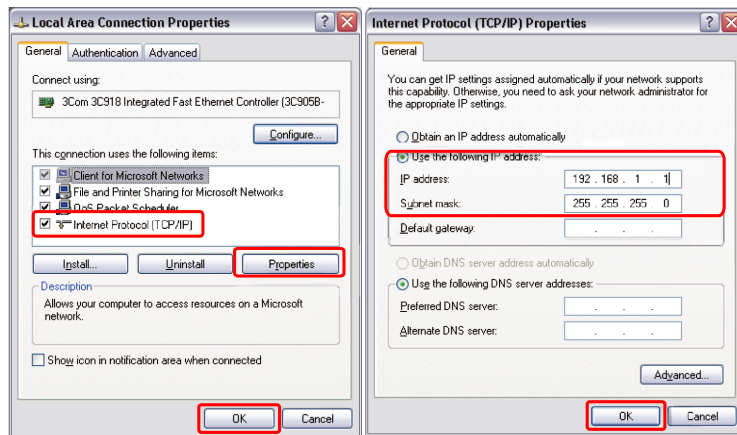


#### 3-3-3-2. Setting PC's IP Address (Windows Vista)

[Start menu] → [Control Panel] → [Network and Sharing Center] → [Local Area Connection] → [Status Display] → [Properties] → [Select Internet Protocol (TCP/IP)] → [Properties] → Check "Use the following IP Address" → Set [IP Address] and [Subnet Mask] → [OK]

#### 3-3-3-3. Setting PC's IP Address (Windows 7)

[Start menu] → [Control Panel] → [Network and Sharing Center] → [Local Area Connection] → [Properties] [Select Internet Protocol (TCP/IP)] → [Properties] → Check "Use the following IP Address" → Set [IP Address] and [Subnet Mask] → [OK]

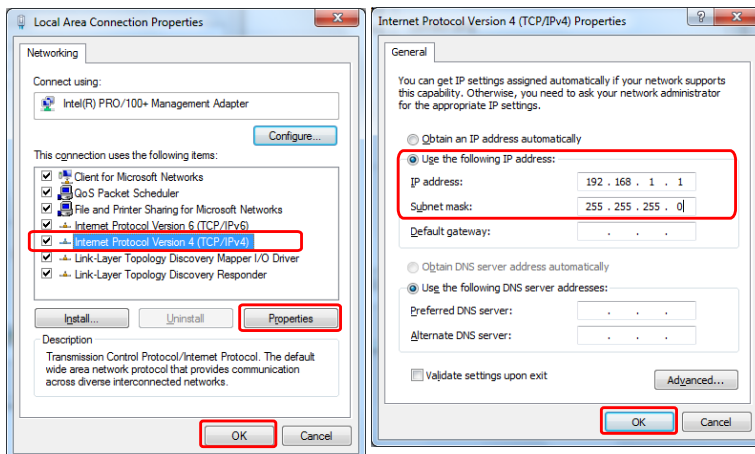

## 4. Installing the USB Driver

To connect this unit to a PC with the USB interface, a USB driver must be installed in the PC. A USB driver and the USB driver installation manual are included in the supplied CD-ROM. Install the USB driver according to this manual. (The manual location: D:\USB Driver\English\GL-USB-UM152.PDF)

\* The drive letter D: represents a CD-ROM drive. It should be read as that of the CD-ROM drive of your PC.

# 5. Installing the Application Software

This chapter describes how to install the application software.

1. Insert the User's Guide CD-ROM provided into the PC's CD-ROM drive.
2. Click the Taskbar's Start button, and then click the Run... icon to open the "Run" window.
3. Enter the CD-ROM drive name and \English\English\GL220\_820-APS\Setup.exe as the name of the file you wish to open.  
If the disk is in drive D, for example, enter "D:\English\GL220\_820-APS\Setup.exe" in the box and then click "OK" to launch the installer.
4. Follow the instructions on the screen to continue with the installation.
5. When a message to restart your PC appears after the installation, be sure to restart it and then start this software.

---

## ● CHECKPOINT

Be sure to observe the following points when connecting the GL to a PC.

- Do not connect any devices apart from a mouse or a keyboard to any of the other USB terminals on your PC.
  - Set the PC's power-saving functions to Off.
  - Set the Screen Saver to Off.
  - Set the anti-virus software auto update and scan scheduler functions to Off. Also, set the Windows auto update and scheduler functions to Off.
  - When using the note PC, if you close the display, the PC may be in stand-by mode. Please do not close the display during using the software.
- 

---

### Trademarks

- Windows, Windows Vista and Windows 7 are registered trademarks of Microsoft Corporation in the US and other countries.
  - The company names, logos and product names mentioned herein are the trademarks or registered trademarks of their respective companies.
-

## 6. Basic Operating Procedure

The basic operating procedure of this software consists of the following four operations:

Operation	Description
Controlling the GL220/GL820/GL200A/GL800 Device	With the GL220/GL820/GL200A/GL800 connected to a PC, you can load the setting information of this unit to this software and make settings and control operations of this unit. The setting conditions can be saved as a configuration file in a PC. This file can be read to reflect the setting conditions.
Checking Input Data	With the GL220/GL820/GL200A/GL800 connected to a PC, you can display signals entered to this unit in a graph on this software and check them in real time.
Data Capture	When the GL220/GL820/GL200A/GL800 is connected to a PC, data can be exported to a PC and saved. Data can be also saved in the GL. Either of the saved data can be used as a backup.
Replaying Captured Data	Data files captured and saved in a PC can be replayed. When the GL220/GL820/GL200A/GL800 is connected to a PC, data saved in the GL can be also replayed. You can clip the desired parts from the replayed data or convert it to a different file format and save it.

### 6-1. Controlling Device


This software can perform the following operations:

- Start/Stop Data Capture
- AMP Settings (Input, Range, Filter, etc.)
- Data Capture Settings (Sampling Interval, Device Data Capture Destination, External Sampling, etc.)
- Trigger, Alarm Settings (Trigger Settings, Alarm Settings, etc.)
- Other Settings (Temperature Unit, Factory Default Settings, etc.)

# 7. Launching and Exiting the Software


## 7-1. Launching the Software

Click the Taskbar's "Start" button → "Programs" → "Graptect" → "GL220\_820APS" → "GL220\_820APS" to launch the application software. Once the program has started up, the following screen is displayed.

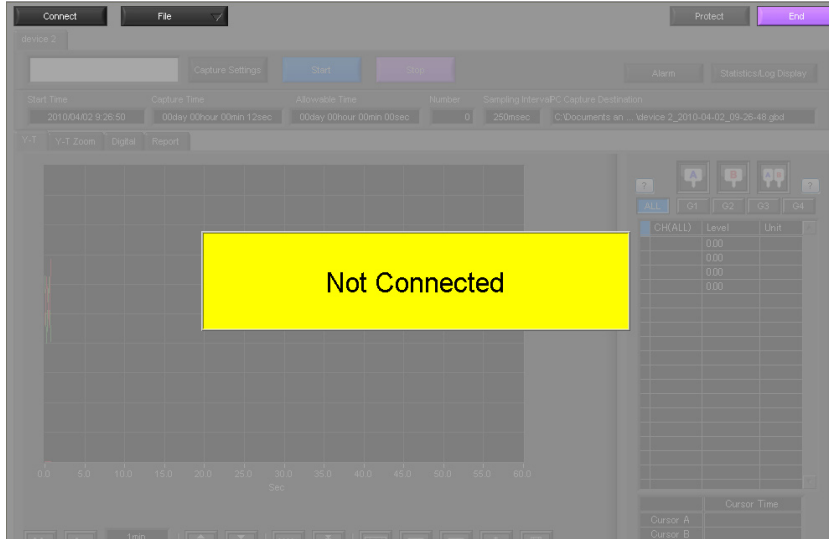


## 7-2. Exiting the Software

To exit the software, click the "End" button in the upper right corner of the main screen.

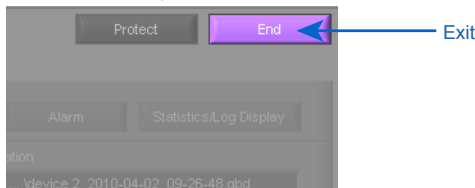

When you try to exit the software in the connected status, a message appears to confirm if the setting conditions are saved to the device.

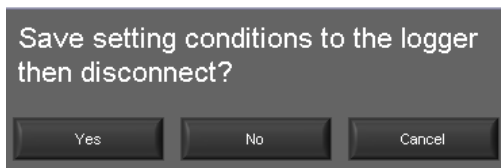

Operation	Description
Yes	Click this button to save the setting conditions on this software in the GL device and exit. Next time connecting to the device, the last setting conditions are reflected.
No	Click this button to exit without saving the setting conditions on this software in the GL device. After the power is turned on, the setting conditions on GL device returns to the state before connecting to the software.
Cancel	This software is not disconnected and it remains active.

### ● CHECKPOINT


The following settings are not saved to this unit.

- Setting items not available on the GL unit
- Line color settings
- Trigger time, duration, and repeated capture settings



# 8. PC Connection Settings

Configure the communication settings between GL and a PC.

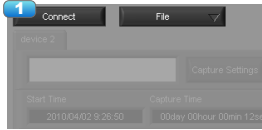

1. Click the "Connect" in the Main screen, and the Connection screen will be displayed.



2. Select an interface to be used for connection (USB connection, LAN connection, or Demo).

3. From "OFF" in the unit registration, select a device type to be connected.

4. At "Device Name" enter a desired name. (\ / : \* ? " < > | characters can not use the name of the device.)


5. At "3. Connecting to a PC" enter the settings that have been made on this unit.

Use the same settings as in Sections 3-3-1 and 3-3-2.

- For USB connection: Enter a "USB ID."



- For TCP/IP connection: Enter an "IP address" and a "Port No.".



- To use Retrieve by Name on TCP/IP (GL820 only)

Click the Retrieve by Name button to display a list of devices. When the LAN-connected GL820 is automatically detected, select a model to be connected and click the "Select" button.



6. Click the "Connect" button to perform the connection to enable communication between the devices.

7. Click the "Close" button to close the Connect screen.

## \* Demo Connection

Demo Connection does not actually connect to the GL unit but makes a pseudo-connection. This connection is available only if the registered device is the GL220 or GL820.

A supplied demo waveform will be displayed.

### ● CHECKPOINT

- A mixture of USB and LAN connections cannot be used.
- Before making a connection, check that this unit is either in a "Free Running" or "Capturing" status.
- When they are connected, the software works with the setting conditions read from the GL unit. When you want to use the PC's settings, press the "Read Setting Conditions" button to read the saved configuration file. To do this, you should save the setting conditions. The following settings are not saved to this unit.
- Setting items not available on the GL unit
- Line color settings
- Trigger time, duration, and repeated capture settings
- After a connection is established, the time on the PC is transferred to this unit. Note that the time of this unit will be changed.

### Connecting multiple devices


GL220\_820APS can connect up to 10 GL devices (maximum 500 channels).



Make settings for each of the devices to be connected.

\* Refer to the previous page for details on the settings.


The connected tabs are displayed. Select each device to make desired settings.

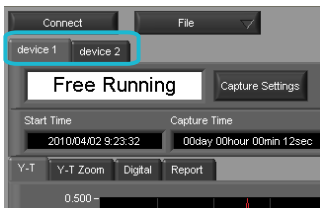


# 9. Display Screens

This section explains the display screens in Free Running or Capturing status in this software.


- Y-T

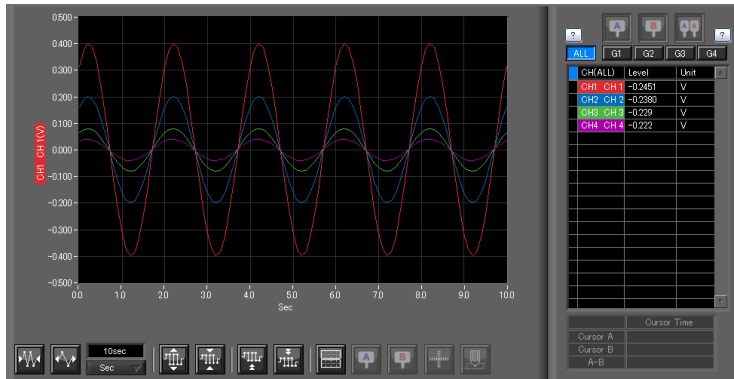

- Y-T Zoom

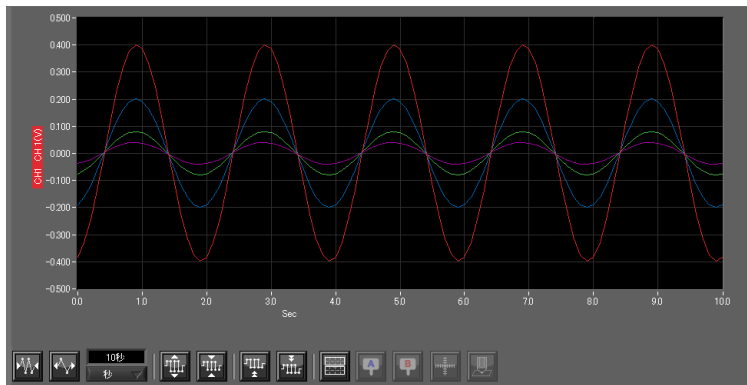

- Digital

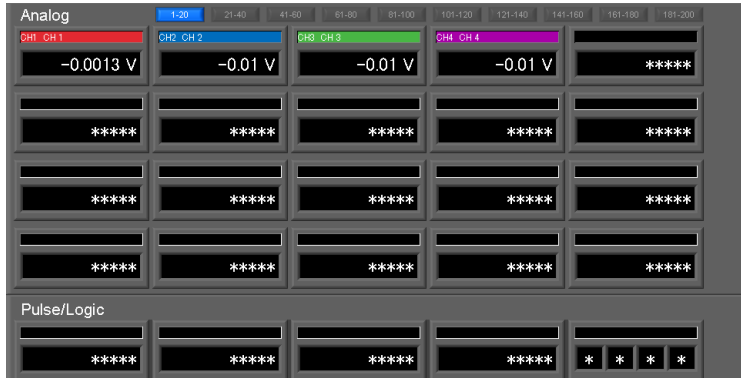


- Report

No.	Date Time	ms	CH1(mV)	CH2(degC)	CH3(mV)	CH4(degC)	Alarm1 (1224567890)	AlarmOut (1234)
4	2010-03-01 15:30:39	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
5	2010-03-01 15:30:40	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
6	2010-03-01 15:30:41	543	-0.0015	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
7	2010-03-01 15:30:42	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
8	2010-03-01 15:30:43	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
9	2010-03-01 15:30:44	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
10	2010-03-01 15:30:45	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
11	2010-03-01 15:30:46	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
12	2010-03-01 15:30:47	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
13	2010-03-01 15:30:48	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
14	2010-03-01 15:30:48	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
15	2010-03-01 15:30:50	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
16	2010-03-01 15:30:51	543	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
17	2010-03-01 15:30:52	543	-0.0013	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
18	2010-03-01 15:30:53	593	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL
19	2010-03-01 15:30:54	593	-0.0014	-0.01	-0.01	-0.01	LLLLLLLLLL	LLLL

	CH1(V)	CH2(V)	CH3(V)	CH4(V)
Average	-0.0014	-0.01	-0.01	-0.01
Max	-0.0013	-0.01	-0.01	-0.01
Min	-0.0015	-0.01	-0.01	-0.01

## 9-1. Y-T (Main Screen)

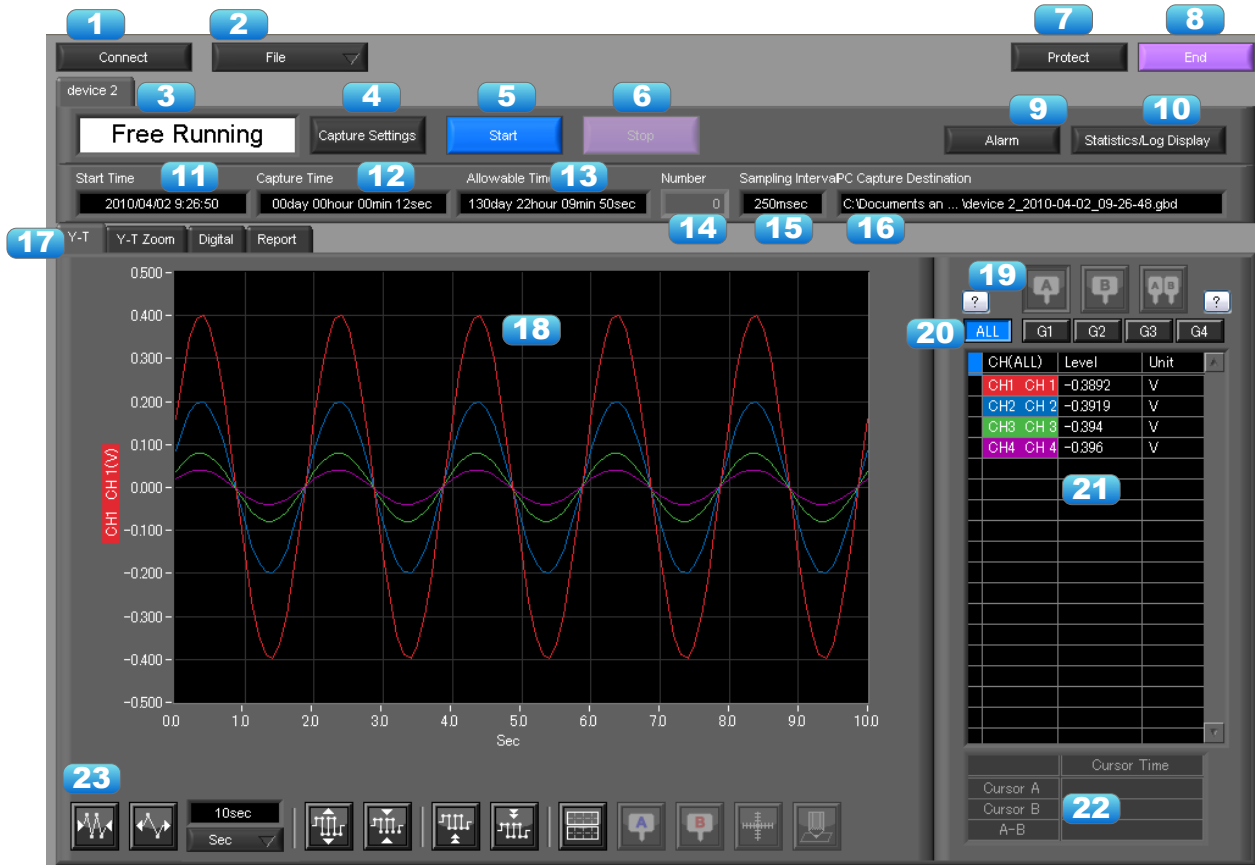


No.	Name	Description	
1	Connect	Opens a screen for connecting to this unit.	
2	File	Conducts file-related operations.	
		Open Data	Displays the data in files stored on the PC or files stored on this unit as waveforms.
		CSV file batch conversion	Click this button to convert multiple GBD (binary data) files captured to the PC to CSV files.
		Print Screen	Click this button to print out a copy of the screen. Printing is performed at the printer that has been selected as the default printer. If you change the printer, relaunch the software.
		Save Screen	Click this button to save the displayed screen as a BMP file.
3	Simplified message area	Recording	Data capture status
		Free Running	Stopped status (not capturing data)
4	Capture Settings	Armed	Awaiting trigger activation; data has not been captured.
		Recording	Data capture status
4	Capture Settings	Click this button to open the data capture settings screen. Refer to "10. Setting Screen" for details.	
5	Start	Click this button to start data capture.	
6	Stop	Click this button to stop data capture.	
7	Protect	Click this button to set the password to protect the software. * Protection operations occur only in this software. Be careful that this software can be exited via Windows operations.	
8	End	Click this button to exit the application.	

9	Alarm	Click this button to display the alarm output port status. If "Alarm Hold" has been selected, the alarm can be cleared by clicking the "Alarm Clear" button.
10	Statistics/Log Display	Click this button to display the results of statistical calculation performed during data capture, and a log of the alarms generated.
11	Start Time	Data capture start time.
12	Capture Time	The amount of time that has elapsed since the start of data capture.
13	Allowable Time	The amount of time available for data capture. When the remaining time is up, data capture stops at both the device and the PC.
14	Number	The number of data capture operations when Repeat Capture has been specified.
15	Sampling Interval	The sampling interval. * EXT is displayed during external sampling.
16	PC Capture Destination	The data capture destination at the PC.
17	Screen switching	Switches between screens (Y-T/Y-T Zoom/Digital/Report Views).
18	Waveform Graph	The waveforms are displayed here.
19	Cursors	Selects which of the cursor values should be displayed in the digital display area when scroll is stopped during capture. Up to three values (Cursor A, Cursor B, Cursor A-B) can be displayed at the same time. This function is available when the scroll is Off during capture, or during replay.
20	Switch displayed groups	Click one of these buttons to select a group whose waveform and digital values are displayed.
21	Digital	The digital values are displayed in this area. Clicking on any of the CH numbers enables the waveform for that channel to be hidden/displayed. The channels for which an alarm has been generated are shown in red. The waveform display On/Off setting is cleared when the capture settings are changed and is reset to On.
22	Cursor Time	The cursor times are displayed during data capture when Scroll Off has been selected.
23	Waveform Op.	Click this button to perform various settings for the waveform display. Refer to section 13-3 for details.


## 9-2. Y-T Zoom

Switches to full-screen Y-T View. The operation is the same as in Y-T View.

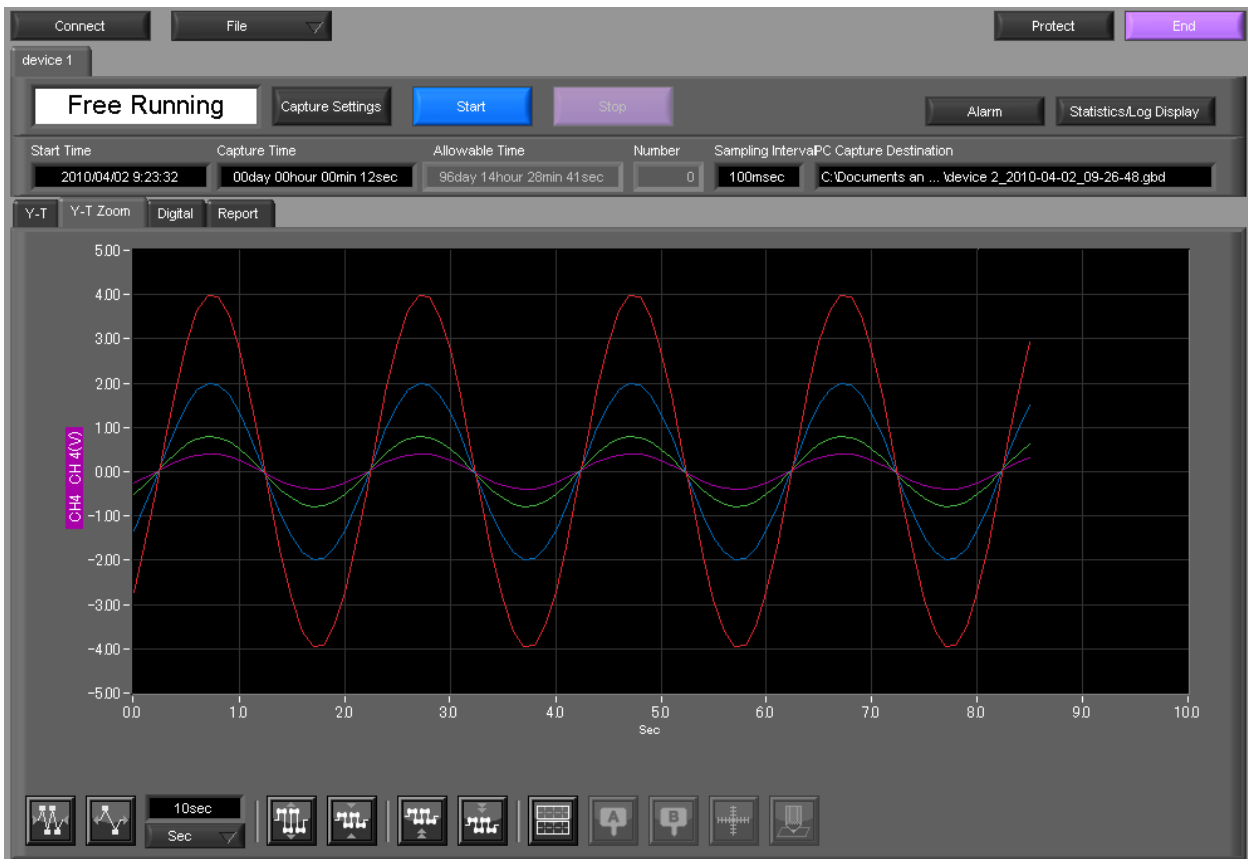

## 9-3. Digital

The captured data is displayed as digital values. Instantaneous values are displayed in large characters to enable easy confirmation.

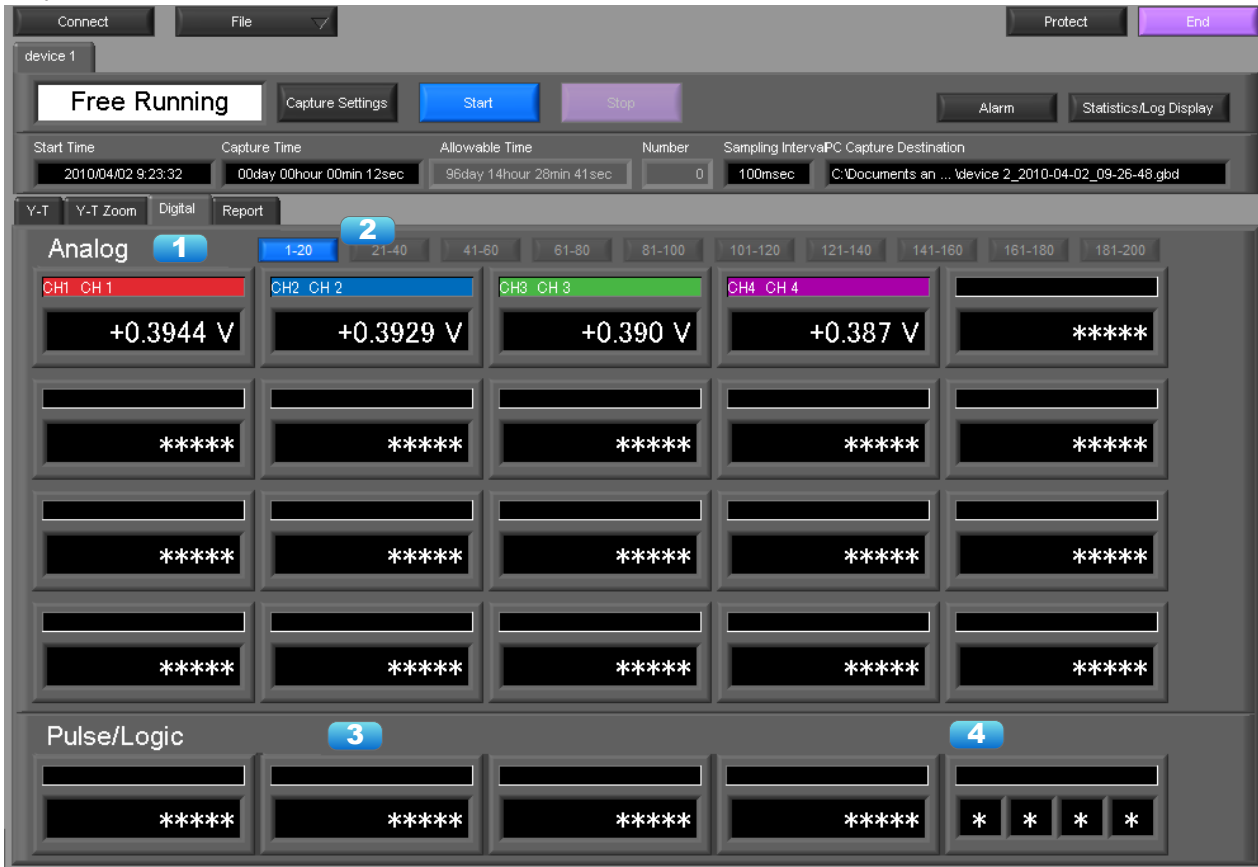

No.	Name	Description
1	Analog	20 analog channels' digital values are displayed here.
2	Set displayed CH	Click one of these buttons to select 20 analog channels to display the digital values. It is not displayed for GL220 or GL200A.
3	Pulse	Pulse signals' digital values are displayed here. (when the Logic/Pulse setting is "Pulse")
4	Logic	Logic signals' digital values are displayed here. (when the Logic/Pulse setting is "Logic")

## 9-4. Report

Displays daily report data during capture when the daily report function is enabled. The displayed data can be displayed on EXCEL in the Free Running status.

If Off has been specified for the Report setting, report data is not displayed.

No.	Date Time	ms	CH1(mV) CH 1	CH2(mV) CH 2	CH3(mV) CH 3	CH4(V) CH 4	CH5(°F) CH 5	CH6(°F) CH 6	CH7(°F) CH 7
16	2010-03-06 18:48:56	200	-9.144	+3.74	-0.40	-0.0026	BURN OUT	BURN OUT	BURN OUT
17	2010-03-06 18:48:57	200	+++++++	+53.12	+104.13	+0.3143	BURN OUT	BURN OUT	BURN OUT
18	2010-03-06 18:48:58	200	-9.460	+3.04	+0.29	-0.0022	BURN OUT	BURN OUT	BURN OUT
19	2010-03-06 18:48:59	200	+++++++	+53.12	+104.14	+0.3096	BURN OUT	BURN OUT	BURN OUT
20	2010-03-06 18:49:00	200	-9.494	+2.41	+0.98	-0.0024	BURN OUT	BURN OUT	BURN OUT
21	2010-03-06 18:49:01	200	+++++++	+53.12	+104.14	+0.3150	BURN OUT	BURN OUT	BURN OUT
22	2010-03-06 18:49:02	200	-9.325	+1.87	+1.55	-0.0022	BURN OUT	BURN OUT	BURN OUT
23	2010-03-06 18:49:03	200	+++++++	+53.12	+104.14	+0.3110	BURN OUT	BURN OUT	BURN OUT
24	2010-03-06 18:49:04	200	-9.097	+1.53	+1.90	-0.0021	BURN OUT	BURN OUT	BURN OUT
25	2010-03-06 18:49:05	200	+++++++	+53.12	+104.13	+0.3142	BURN OUT	BURN OUT	BURN OUT
26	2010-03-06 18:49:06	200	-9.073	+1.79	+2.15	-0.0020	BURN OUT	BURN OUT	BURN OUT
27	2010-03-06 18:49:07	200	+++++++	+53.12	+104.14	+0.3125	BURN OUT	BURN OUT	BURN OUT
28	2010-03-06 18:49:08	200	-9.137	+1.61	+1.82	-0.0021	BURN OUT	BURN OUT	BURN OUT
29	2010-03-06 18:49:09	200	+++++++	+53.12	+104.14	+0.3153	BURN OUT	BURN OUT	BURN OUT
30	2010-03-06 18:49:10	200	-9.321	+1.91	+1.53	-0.0022	BURN OUT	BURN OUT	BURN OUT
31	2010-03-06 18:49:11	200	+++++++	+53.12	+104.14	+0.3105	BURN OUT	BURN OUT	BURN OUT
Average			*****	+28.31	+51.93	+0.1549	*****	*****	*****
Max			*****	+53.12	+104.14	+0.3153	*****	*****	*****
Min			-9.539	+1.53	-3.12	-0.0029	*****	*****	*****

No.	Name	Description
1	Display in Excel	The data is displayed in Excel format when the device is in the Free Running status. The Microsoft Excel program must be installed in order for the Export to Direct Excel File function to be used. * Data displayed on EXCEL is only data displayed in the report.
2	Daily Report Capture Interval	The daily report capture interval is displayed here.
3	Daily report data	The daily report data is displayed here. If the number of points exceeds 100, data is deleted starting from the oldest data (the actual data is not affected).
4	Calc. results	The calculated results for the average, maximum and minimum values are displayed here.




# 10. Settings Screens

This chapter describes the screens used to perform settings related to data capture.

## 10-1. AMP Settings

This screen is used to make the analog input, logic input, and pulse input settings.

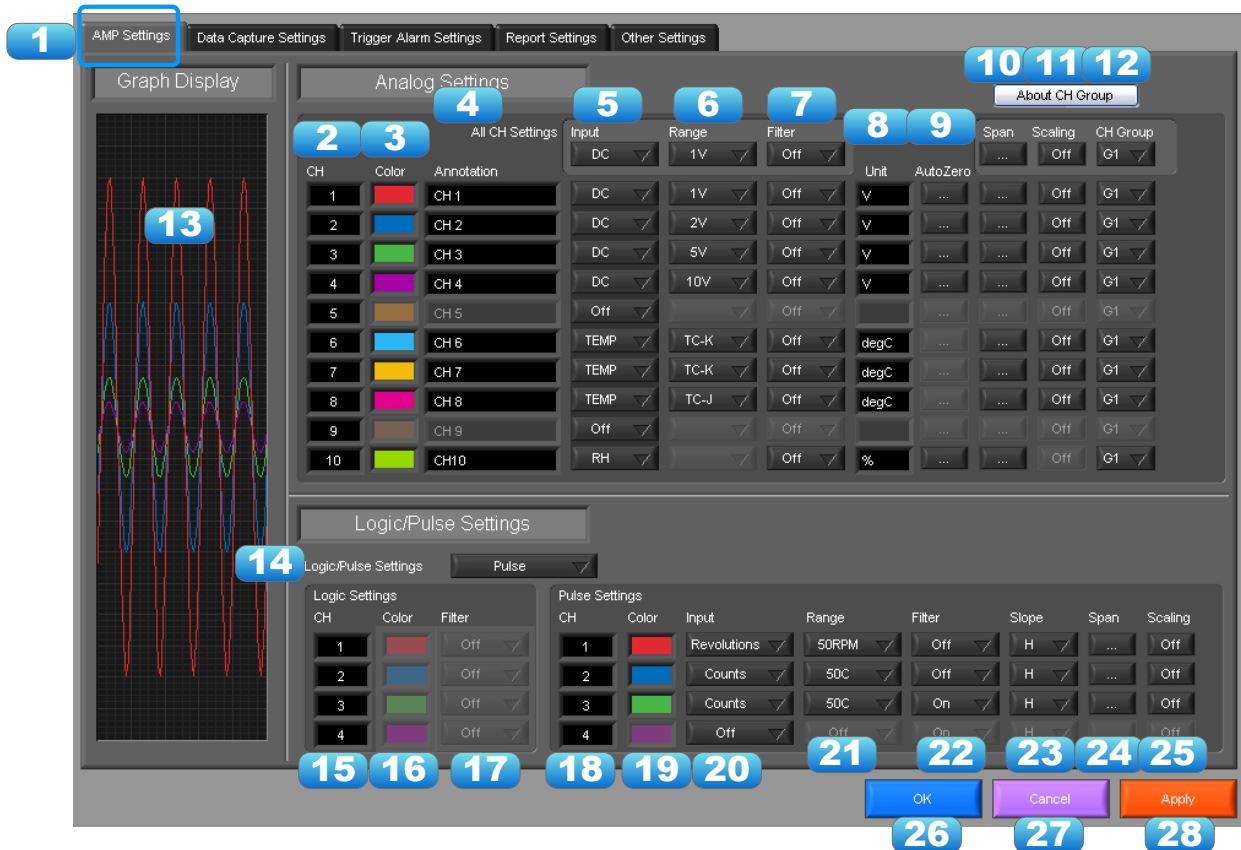

No.	Name	Description
1	Settings tabs	These tabs are used to change the settings screen.
		AMP Settings   This tab is used to make input-related settings.
		Data Capture Settings   This tab used to make settings related to data capture.
		Trigger/Alarm Settings   This tab is used to make settings related to the trigger and alarm functions.
		Report Settings   This tab is used to make settings related to the daily report, monthly report, and Export to Direct Excel File functions
Other Settings   This tab is used to make various other settings, to display information, and so forth.		
2	CH	These are the channel numbers for analog input.
3	Color	The color used for the waveform for each channel can be specified here. * The line color settings are not stored in captured data. Since the setting values of this software are used, the line colors may be different during capture and replay.
4	Annotation	Each channel can be freely annotated (input the signal name, etc.). The maximum number of characters is 31 (in single-byte).

No.	Name	Description	
5	Input	Select the input type for each channel.	
		Off	No input is made to that channel.
		DC	Select DC to perform voltage measurement.
		TEMP	Select TEMP to perform temperature measurement.
6	Range	These buttons are used to select the input range for each channel.	
		DC	20/50/100/200/500(mV)/1/2/5/10/20/50(V)/1-5V
		TEMP	TC-K/TC-J/TC-T/TC-R/TC-E/TC-B/TC-S/TC-N/TC-W Pt100*/JPt100*/PT1000* (* is only GL820 or GL800)
		RH	Fixed to 1 V; the unit is converted internally. 0V → 0%, 1V → 100%
7	Filter	Use these buttons to set the filter for each channel. Moving average processing is used in the filter. It captures the data for configured number of times at the configured sampling rate and performs average processing. (Off/2/5/10/20/40)	
8	Unit	The selected unit is displayed here.	
9	Auto Zero	Adjusts the current input value as the zero points for each channel (voltage and humidity only). Refer to section 10-1-1 for details.	
10	Span	Use these buttons to set the upper limit and lower limit values for the waveforms displayed in the waveform graph. Refer to section 10-1-2 for details	
11	Scaling	Use these buttons to convert the unit. Refer to section 10-1-3 for details	
12	CH Group	Use these buttons to set the display group for each channel. Only the groups set here can be viewed in Y-T display screen.	
13	Graph Display	The waveforms for which settings have been made can be checked here. Click the "Apply" button to apply the settings that have been made.	
14	Logic/Pulse switching	Use this button to switch the digital input. Logic, Pulse, or OFF can be set here. This setting is not available for GL200A. (Off/Pulse/Logic)	
15	Logic CH number	The channel numbers for logic input.	
16	Logic Line Color	Make the logic waveform color setting here.	
17	Logic Filter	Make the logic filter setting here. The filter is about -3dB at about 30Hz. (Off/On)	
18	Pulse CH number	The channel numbers for pulse input.	
19	Pulse Line Color	Make the pulse line color setting here.	
20	Pulse Input	Use the Input button to select the pulse input type. * The upper limit of the count in one sample is 50k.	
		Revolutions	The number of pulses generated in one second is counted, multiplied by 60, and displayed as the number of revolutions (RPM).
		Counts	A cumulative count is made of the number of pulses generated in one sample.
		Inst.	The number of pulses generated in one sample is counted.
21	Pulse Range	Use these buttons to set the pulse range.	
		Revolutions	50/500/5000/50k/500k/5M/50M/500M (RPM/F.S.)
		Counts	50/500/5000/50k/500k/5M/50M/500M (C/F.S.)
		Inst.	50/500/5000/50k/500k/5M/50M/500M (C/F.S.)
22	Pulse Filter	Make the pulse filter setting here. The filter is about -3dB at about 30Hz. (Off/On)	


No.	Name	Description	
23	Pulse Slope	Use this button to select the pulse detection slope.	
		H	Rising signals are counted.
		L	Falling signals are counted.
24	Pulse Span	Use this button to set the upper limit and lower limit values for the waveforms displayed in the waveform graph.	
25	Pulse Scaling	Use this button to convert the unit.	
26	OK	Click this button to register your settings and close the screen.	
27	Cancel	Click this button to close the screen without registering your settings.	
28	Apply	Click this button to apply the settings mode.	

### 10-1-1. Auto Zero Setting

Performs zero adjustment.

The adjustable range is  $\pm 10\%$  of the setting range.

(Example: For a range of 1V, the full scale is  $\pm 1$  V, and the adjustable range is  $\pm 100$  mV.)

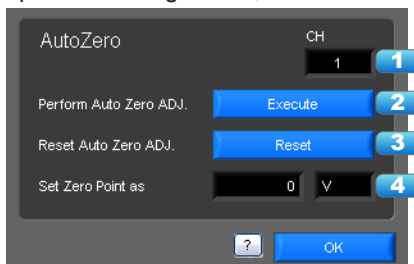


No.	Name	Description
1	CH	Displays a channel for which Auto Zero ADJ. should be performed.
2	Perform Auto Zero ADJ.	Performs Auto Zero ADJ. * If you have changed the input or range just before this step, first click "Apply" in the capture setting screen.
3	Reset Auto Zero ADJ.	Resets the zero adjustment to the initial state. * Changing the range will reset this setting.
4	Zero position voltage value	Displays the adjusted value after Zero ADJ.

### 10-1-2. Span Settings


Span settings are made at this screen.

To make the settings, input numerical values directly or use a cursor to adjust values.

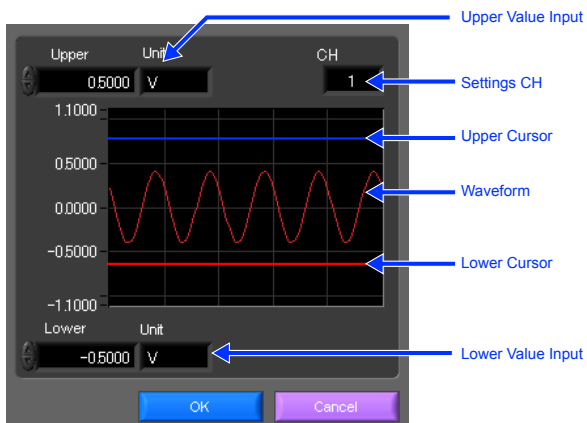


### 10-1-3. Scaling Settings

Sets the scaling (unit conversion). Enter the upper and lower limits of the input and converted values. For the temperature channel, the offset setting with two points is used. \* If you have changed the input from the temperature or voltage just before retrieving the temperature measurement values, first click "Apply" in the capture setting screen.

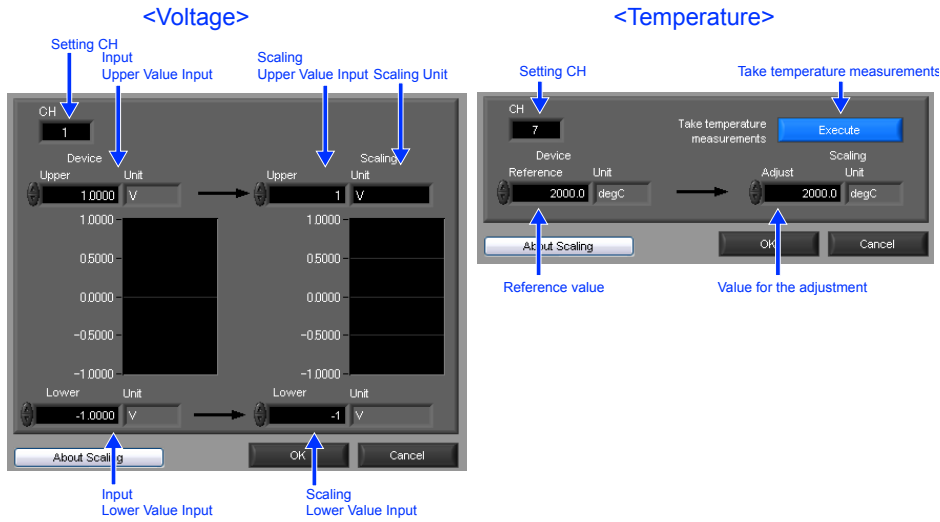

## 10-2. Data Capture Settings

Settings such as the Sampling Interval, Device Capture Settings and PC Capture Settings are made at this screen.

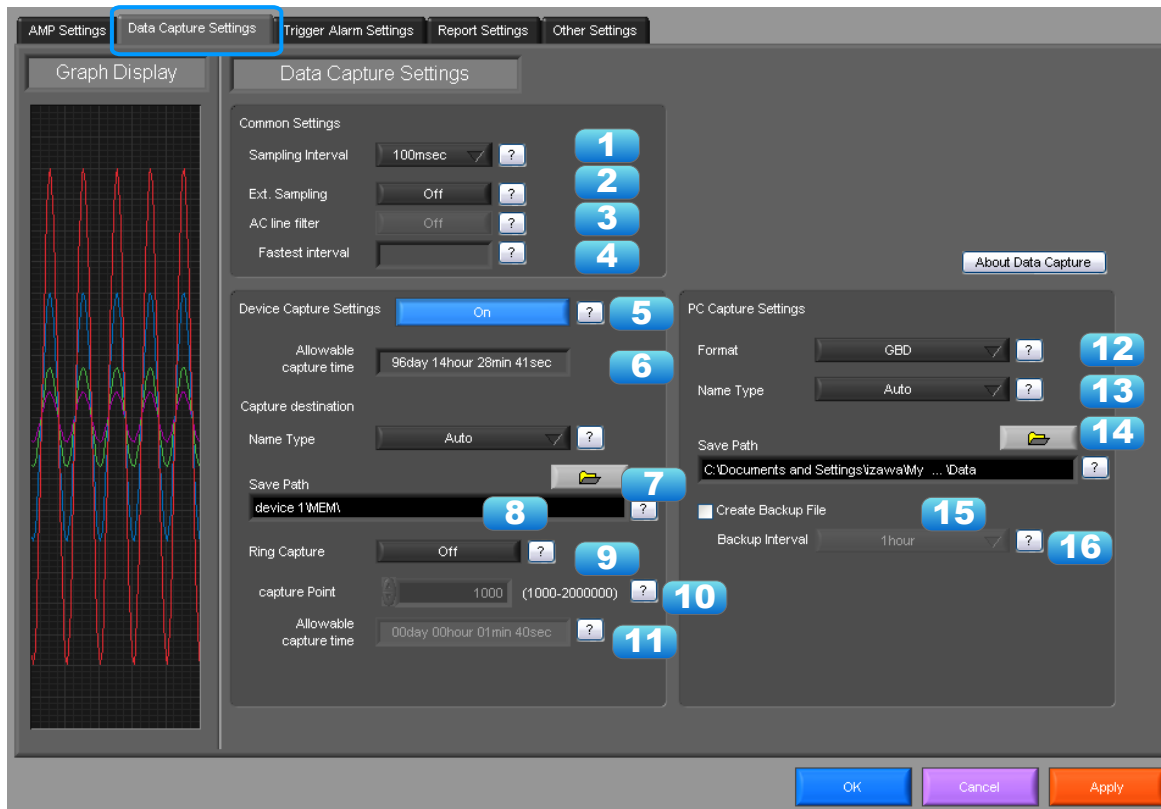


No.	Name	Description
1	Sampling Interval	Specifies the sampling interval for data capture. The sampling interval that can be specified depends on the number of measured channels. 10/20/50/100/125/200/250/500(ms)/1/2/5/10/20/30(s)/1/2/5/10/20/30(min)/1(h) * Allowable settings vary with the input setting and the number of measurement channels.

No.	Name	Description				
2	External sampling	<p>Sets the external sampling function to On or Off.</p> <p>If set to On, data is captured using signals entered from the external input terminal.</p> <p>Signals that can be entered from the external input terminal must be slower than the "fastest interval" display. Refer to the User's Manual for details.</p> <p>* This function is available only for the GL220 and GL820.</p>				
3	AC Line Filter	<p>Sets the AC line filter function to On or Off in the external sampling settings.</p> <p>The On or Off setting will change the fastest interval of the external sampling.</p> <p>Refer to the User's Manual for details.</p> <p>* This function is available only for the GL220 and GL820.</p>				
4	Fastest interval	<p>Displays the fastest interval of external sampling when the external sampling function is used. The fastest interval varies with the AC line filter setting and the number of measurement channels. Refer to the User's Manual for details.</p> <p>* This function is available only for the GL220 and GL820.</p>				
5	Device Capture Destination Settings button	<p>Use this button to specify the On/Off of data capture of the GL device.</p> <table border="1"> <tr> <td>On</td> <td>Data capture operation is also performed on the GL device. Data capture cannot be started when there is no space in the data capture destination of the device. Data is captured to both the device and the PC.</td> </tr> <tr> <td>Off</td> <td>Data capture operation is not performed on the GL device. Data capture can be started when there is no space in the data capture destination of the device. Data is captured only to the PC.</td> </tr> </table> <p>* A setting of capturing data in CSV format to this unit is not available.</p>	On	Data capture operation is also performed on the GL device. Data capture cannot be started when there is no space in the data capture destination of the device. Data is captured to both the device and the PC.	Off	Data capture operation is not performed on the GL device. Data capture can be started when there is no space in the data capture destination of the device. Data is captured only to the PC.
On	Data capture operation is also performed on the GL device. Data capture cannot be started when there is no space in the data capture destination of the device. Data is captured to both the device and the PC.					
Off	Data capture operation is not performed on the GL device. Data capture can be started when there is no space in the data capture destination of the device. Data is captured only to the PC.					
6	Device Capture Settings Allowable capture time	The length of time available for data capture to the selected device storage medium (internal memory or USB device) is displayed here.				
7	Device Capture Settings Name Type	<p>Use this button to select the method for appending the file name.</p> <table border="1"> <tr> <td>Auto</td> <td>Create a date folder in the specified folder, and then create a date and time file in it. (Example: 2010-04-01_12-34-56.GBD)</td> </tr> <tr> <td>User</td> <td>The file name can be freely specified by the user.</td> </tr> </table>	Auto	Create a date folder in the specified folder, and then create a date and time file in it. (Example: 2010-04-01_12-34-56.GBD)	User	The file name can be freely specified by the user.
Auto	Create a date folder in the specified folder, and then create a date and time file in it. (Example: 2010-04-01_12-34-56.GBD)					
User	The file name can be freely specified by the user.					
8	Device Capture Settings Save Path	The save destination at the device for the captured data is selected here.				
9	Ring Capture	<p>Ring Capture is a function that captures data while deleting old data when a specified number of capture points is exceeded. This function sets the Ring Capture function to On or Off on the GL220 or GL820 unit.</p> <p>Refer to the User's Manual for details.</p> <p>* Ring Capture is supported only on this unit. Only normal capture is available on the PC.</p> <p>* This function is not available for the GL200A and GL800.</p>				
10	Ring Capt. Pts.	Sets the number of capture points when Ring Capture is performed. Refer to the User's Manual for details.				
11	Ring Allowable Capture Time	Displays the time available for capture in Ring Capture. Refer to the User's Manual for details.				
12	PC Capture Settings Format	<p>Use this button to select the format of the data saved to the PC (personal computer).</p> <table border="1"> <tr> <td>Binary format (GBD)</td> <td>The data is saved as binary data. When compared with a CSV file, the file size is somewhat small.</td> </tr> <tr> <td>Text format (CSV)</td> <td>The data is saved as text data in a format that can be displayed in Excel.</td> </tr> </table>	Binary format (GBD)	The data is saved as binary data. When compared with a CSV file, the file size is somewhat small.	Text format (CSV)	The data is saved as text data in a format that can be displayed in Excel.
Binary format (GBD)	The data is saved as binary data. When compared with a CSV file, the file size is somewhat small.					
Text format (CSV)	The data is saved as text data in a format that can be displayed in Excel.					

No.	Name	Description
13	PC Capture Settings Name Type	Use this button to select the method for appending the file name.
		Auto A folder with the date as the file name is created within the specified folder, and then a file with the date and time as the file name is created within the newly-created folder. (Example: Device1_2010-04-01_12-34-56.GBD)
		User The file name can be freely specified by the user.
14	PC Capture Settings Save Path	The save destination at the PC (personal computer) for the captured data is selected here.
15	PC Capture Settings Create Backup File	To enable this function, click the checkbox to display the check mark. The backup file is created at the same location as that specified in Item 14 "Save Path" above. The "_bk" file extension is appended to the file name.
16	PC Capture Settings Backup Interval	Use this button to select the backup interval. During data capture, a backup data file is created at the specified intervals. If all the backup files are linked, the data will be same as that of the original data. (1/2/6/12/24(h)) * A fluctuation of about 10 seconds will be generated in the backup interval. Therefore, the data size of a backup file fluctuates to some degree. Since there is no loss of data, however, you can concatenate backup files to obtain data equivalent to that of one backup file that you would obtain from continuous capture.

## 10-3. Trigger/Alarm Settings

Settings such as the trigger start condition, stop condition, alarm settings, and those for sending email are made at this screen.

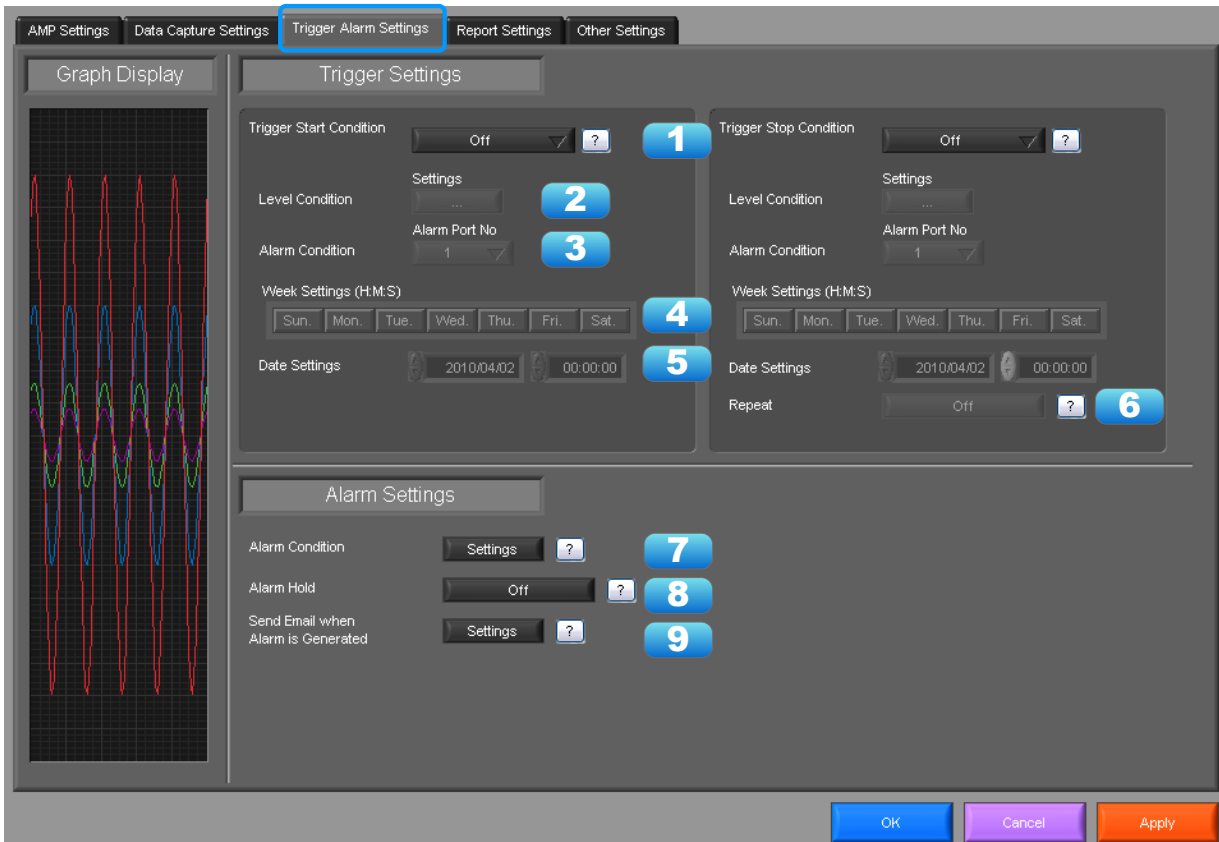

No.	Name	Description
1	Trigger Start/Stop Condition	Use this button to select the trigger start(stop) condition.
		Off There is no data capture start condition. (There is no stop condition.)
		Level Data capture starts(stops) when the desired channel reaches the specified level value.
		Alarm Data capture starts(stops) when the specified alarm occurs. * Available only for the GL220, GL820, and GL800.
		Date Data capture starts(stops) at the specified date and time. * Settings are available only if Repeated Capture is Off. * Settings are not transmitted to or received from this unit.
		Time Data capture starts(stops) at the specified time. * Settings are available only if Repeated Capture is On. * Settings are not transmitted to or received from this unit.
		External Data capture starts(stops) with the external terminal signal. Data capture starts when the external trigger signal detects a falling of about 2.5V or less.
		Week Starts (stops) capture when the specified day of the week arrives. * Available only for the GL220 and GL820.
2	Level Condition	Defined Time Starts (stops) capture when a specified length of time elapses. * The starting function is available only for the GL220 and GL820.
		If "Level" has been selected for the start(stop) condition, make the required level settings here. Refer to section 10-3-1 for details.

No.	Name	Description				
3	Alarm Condition	If "Alarm" has been selected for the trigger start(stop) condition, set the alarm number here. Select an alarm number between 1 and 4. This setting is not available for GL200A.				
4	Week Settings	Sets the day of the week when the trigger start (stop) condition is "Week."				
5	Date Settings	Sets the Date for starting (stopping) the capture on a specified day of the week when the trigger start (stop) condition is "Date", "Time" and "Week".				
6	Repeat	If On has been selected, the device proceeds to perform the next data capture operation after a start(stop) trigger has been generated. * Does not transmit or receive the settings to or from this unit. This unit is always Off and the file name does not include "REP."				
7	Alarm Condition	Use this button to make the alarm level settings for each input.				
8	Alarm Hold	This parameter specifies whether to maintain or clear the alarm status. <table border="1" data-bbox="523 600 1412 831"> <tr> <td>On</td> <td>Once an alarm has been generated, the alarm status is maintained. The alarm generated on each channel is retained together with the alarm output status. To clear the alarm status, click the "Alarm Clear" button displayed in the "Alarm Screen".</td> </tr> <tr> <td>Off</td> <td>The alarm generated status is not maintained. If the alarm status is canceled, the alarm status and alarm output for each channel are canceled.</td> </tr> </table>	On	Once an alarm has been generated, the alarm status is maintained. The alarm generated on each channel is retained together with the alarm output status. To clear the alarm status, click the "Alarm Clear" button displayed in the "Alarm Screen".	Off	The alarm generated status is not maintained. If the alarm status is canceled, the alarm status and alarm output for each channel are canceled.
On	Once an alarm has been generated, the alarm status is maintained. The alarm generated on each channel is retained together with the alarm output status. To clear the alarm status, click the "Alarm Clear" button displayed in the "Alarm Screen".					
Off	The alarm generated status is not maintained. If the alarm status is canceled, the alarm status and alarm output for each channel are canceled.					
9	Send Email when Alarm is Generated	This button to set the conditions for sending an email. An email can be sent when an alarm has been generated. (However, an email sending environment must be enabled.) * Sends mail only during capture.				

---

● CHECKPOINT


When the sampling is set to the External, the start trigger and the stop trigger cannot be set to the external at the same time. Also when the start trigger or the stop trigger is set to the External, if the sampling is set to the External, the start trigger or the stop trigger is force set to Off.

---



### 10-3-1. Trigger Level Condition


If "Level" has been selected for the Trigger setting, the "Trigger Start/Stop Condition" settings must be made.

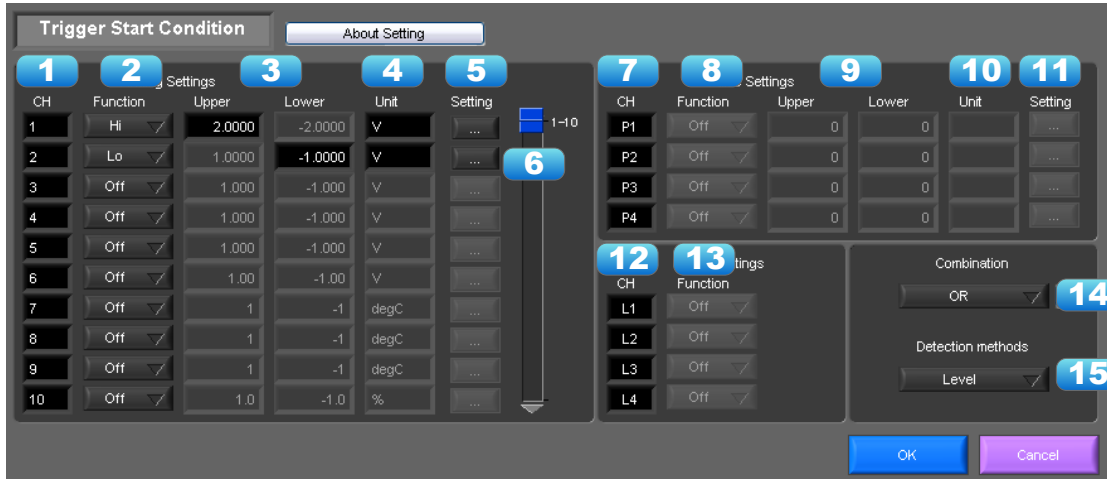

No.	Name	Description										
1	CH	The channel numbers are displayed here.										
2	Function	Use this button to select the trigger level detection mode. <table border="1"> <tr> <td>Off</td> <td>Disabled</td> </tr> <tr> <td>Hi</td> <td>A trigger is generated if the input signal is above the specified level.</td> </tr> <tr> <td>Lo</td> <td>A trigger is generated if the input signal is below the specified level.</td> </tr> <tr> <td>WinIn</td> <td>A trigger is generated if the input signal comes between the specified levels.</td> </tr> <tr> <td>WinOut</td> <td>A trigger is generated if the input signal goes outside the specified levels.</td> </tr> </table>	Off	Disabled	Hi	A trigger is generated if the input signal is above the specified level.	Lo	A trigger is generated if the input signal is below the specified level.	WinIn	A trigger is generated if the input signal comes between the specified levels.	WinOut	A trigger is generated if the input signal goes outside the specified levels.
Off	Disabled											
Hi	A trigger is generated if the input signal is above the specified level.											
Lo	A trigger is generated if the input signal is below the specified level.											
WinIn	A trigger is generated if the input signal comes between the specified levels.											
WinOut	A trigger is generated if the input signal goes outside the specified levels.											
3	Upper/Lower	The level settings are displayed here.										
4	Unit	The unit is displayed here.										
5	Setting	Click this button to make the level settings.										
6	Switch CH	Use this slider to select 10 channels to perform the settings. * Not available for the GL200A and GL220.										
7	Pulse CH	The channel numbers for pulses are displayed here.										
8	Pulse Function	Use this button to select the pulse level detection mode. (Same as Analog)										
9	Pulse Upper/Lower	The level settings are displayed here.										
10	Pulse Unit	The unit is displayed here.										
11	Pulse Settings	Click this button to make the pulse settings.										
12	Logic CH	The channel numbers for logics are displayed here.										
13	Logic Function	Use this button to select the logic setting. <table border="1"> <tr> <td>Off</td> <td>Disabled</td> </tr> <tr> <td>H</td> <td>Detection is performed when the signal is rising.</td> </tr> <tr> <td>L</td> <td>Detection is performed when the signal is falling.</td> </tr> </table>	Off	Disabled	H	Detection is performed when the signal is rising.	L	Detection is performed when the signal is falling.				
Off	Disabled											
H	Detection is performed when the signal is rising.											
L	Detection is performed when the signal is falling.											
14	Combination	Use this button to set the combination of configured triggers. <table border="1"> <tr> <td>OR</td> <td>Data capture starts (stops) when one of the configured trigger conditions is true.</td> </tr> <tr> <td>AND</td> <td>Data capture starts (stops) when all of the configured trigger conditions are true.</td> </tr> </table>	OR	Data capture starts (stops) when one of the configured trigger conditions is true.	AND	Data capture starts (stops) when all of the configured trigger conditions are true.						
OR	Data capture starts (stops) when one of the configured trigger conditions is true.											
AND	Data capture starts (stops) when all of the configured trigger conditions are true.											
15	Detection methods	Sets the detection method of a trigger. * Available only for the GL220 and GL820. <table border="1"> <tr> <td>Level</td> <td>Each condition is Level operation.</td> </tr> <tr> <td>Edge</td> <td>Each condition is Edge operation.</td> </tr> </table> Refer to section 10-3-1-2 for details.	Level	Each condition is Level operation.	Edge	Each condition is Edge operation.						
Level	Each condition is Level operation.											
Edge	Each condition is Edge operation.											

### 10-3-1-1. Trigger Level Settings Screen

This screen is used to make the level settings to detect a trigger. To make the settings, you input numerical values directly or use a cursor.

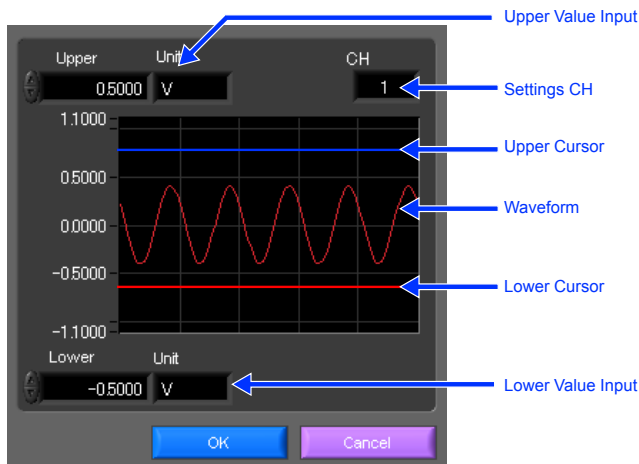


### 10-3-1-2. Level Detection and Edge Detection

To detect a trigger, you can select level detection or edge detection.

- Level Detection:


In the level detection, a trigger is detected when an input signal is above/below the specified level.

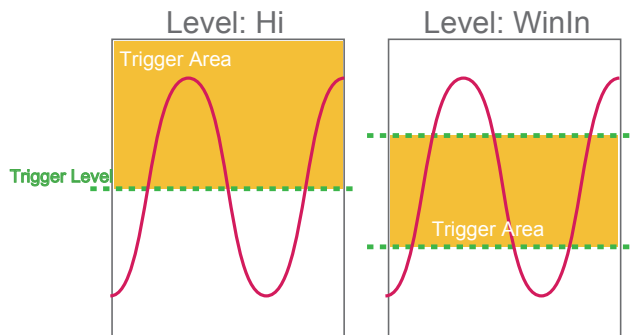

- Edge Detection:


In the edge detection, a trigger is detected when an input signal is above/below the specified level.

Even if an input signal reached the detection level before, a trigger is not detected unless it reaches the level again after it is outside.

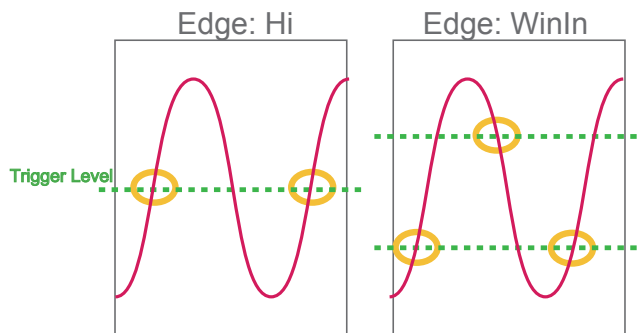

### 10-3-2. Alarm Condition

The alarm level settings for each input are made at this screen.

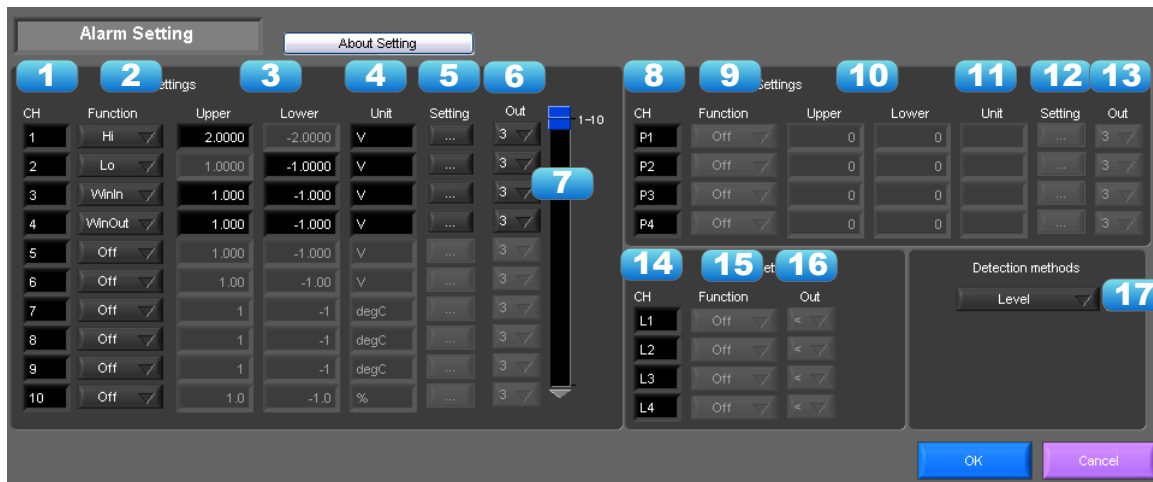

No.	Name	Description										
1	CH	The channel numbers are displayed.										
2	Function	Select the alarm level detection mode. <table border="1"> <tr> <td>Off</td> <td>Disabled.</td> </tr> <tr> <td>Hi</td> <td>An alarm is generated if the input signal is above the specified level.</td> </tr> <tr> <td>Lo</td> <td>An alarm is generated if the input signal is below the specified level.</td> </tr> <tr> <td>WinIn</td> <td>An alarm is generated if the input signal comes between the specified levels.</td> </tr> <tr> <td>WinOut</td> <td>An alarm is generated if the input signal goes outside the specified levels.</td> </tr> </table>	Off	Disabled.	Hi	An alarm is generated if the input signal is above the specified level.	Lo	An alarm is generated if the input signal is below the specified level.	WinIn	An alarm is generated if the input signal comes between the specified levels.	WinOut	An alarm is generated if the input signal goes outside the specified levels.
Off	Disabled.											
Hi	An alarm is generated if the input signal is above the specified level.											
Lo	An alarm is generated if the input signal is below the specified level.											
WinIn	An alarm is generated if the input signal comes between the specified levels.											
WinOut	An alarm is generated if the input signal goes outside the specified levels.											
3	Upper/Lower	The level settings are displayed here.										
4	Unit	The unit is displayed here.										
5	Setting	Click this button to make the level settings.										
6	Output	Set the terminal that outputs an alarm. It is selected out of the device's four alarm output terminals. OR is applied to output of the terminal for each channel.										
7	Switch CH	Use this slider to select 10 channels to perform the settings. * Not available for the GL200A and GL220.										
8	Pulse CH	The channel numbers for pulses are displayed here.										
9	Pulse Function	Use this button to select the pulse level detection mode. (Same as Analog)										
10	Pulse Upper/Lower	The level settings are displayed here.										
11	Pulse Unit	The unit is displayed here.										
12	Pulse Settings	Click this button to make the pulse settings.										
13	Pulse Output	Set the terminal that outputs an alarm. It is selected out of the device's four alarm output terminals. OR is applied to output of the terminal for each channel.										
14	Logic CH	The channel numbers for logics are displayed here.										
15	Logic Function	Use this button to select the logic setting. <table border="1"> <tr> <td>Off</td> <td>Disabled</td> </tr> <tr> <td>H</td> <td>Detection is performed when the signal is rising.</td> </tr> <tr> <td>L</td> <td>Detection is performed when the signal is falling.</td> </tr> </table> Refer to section 10-3-1 for details.	Off	Disabled	H	Detection is performed when the signal is rising.	L	Detection is performed when the signal is falling.				
Off	Disabled											
H	Detection is performed when the signal is rising.											
L	Detection is performed when the signal is falling.											
16	Logic Output	Set the terminal that outputs an alarm. It is selected out of the device's four alarm output terminals. OR is applied to output of the terminal for each channel.										

No.	Name	Description	
17	Detection methods	Sets the detection method of a alarm. * Available only for the GL220 and GL820.	
		Level	Each condition is Level operation.
		Edge	Each condition is Edge operation.
Refer to section 10-3-1-2 for details.			

### 10-3-3. Send Email when Alarm is Generated

An email can be sent to a specified email address (or addresses) when an alarm is generated.  
(An email sending environment must be enabled.)

No.	Name	Description
1	Send Email when Alarm is Generated	To send an email when an alarm has been generated, click the checkbox to insert a check
2	Address(s)	Enter the email address.
3	Comment	Enter the Comment.
4	SMTP Server	Enter the SMTP server name or address.
5	Sender address	Enter the sender email address.

● CHECKPOINT

The mail send function is available only during capture. No mail is sent even if an alarm is generated during the Free Running status.


## 10-4. Report Settings

The daily report and monthly report settings, as well as the Direct to Excel settings, are made at this screen.

The daily report and monthly report are created as separate CSV files at capture intervals that are separate from those of the captured data.

The Export to Direct Excel File function transfers data in real time to an Excel file as it is being captured.

If a template is used for the Excel file, waveforms can also be drawn in Excel in real time.

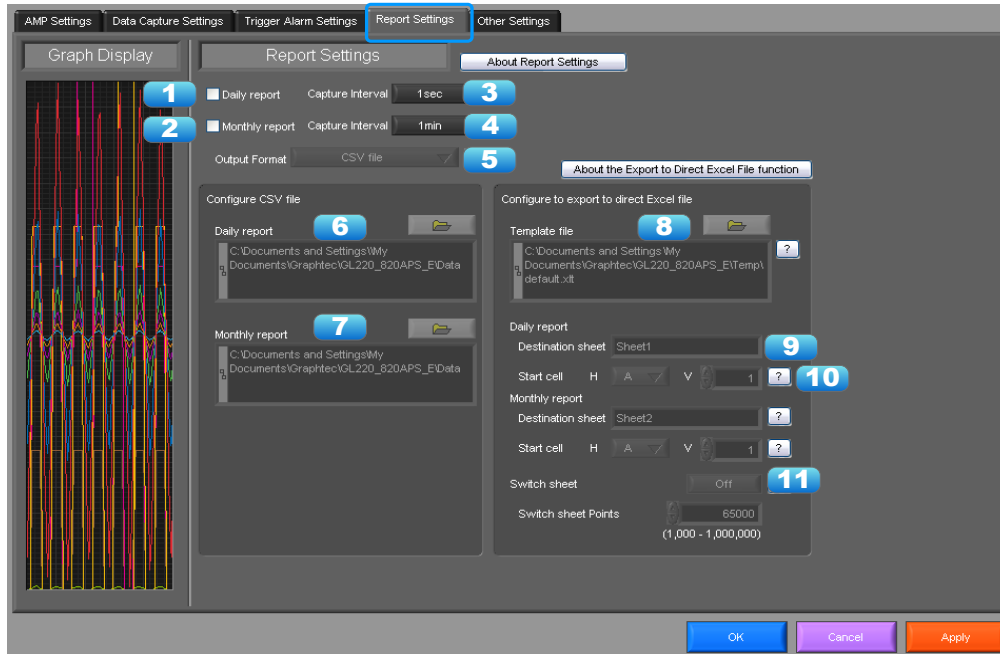


No.	Name	Description				
1	Daily report	Click this checkbox to enter a check and enable the Daily report function.				
2	Monthly report	Click this checkbox to enter a check and enable the Monthly report function.				
3	Daily report Capture Interval	Use this button to select the daily capture interval. 100/200/500msec/1/5/10/30sec/1/5/10/30min. Data is captured at the sampling interval when the settings are faster than the sampling interval.				
4	Monthly report Capture Interval	Use this button to select the monthly capture interval. Available settings are 1/5/10/30min/1/2/6/12/24hours. Data is captured at the sampling interval when the settings are faster than the sampling interval.				
5	Output Format	Use this button to select the output format for the report(s). <table border="1" style="width: 100%;"> <tr> <td>Save as CSV batch files</td> <td>The data is saved as CSV batch files.</td> </tr> <tr> <td>Export to direct Excel file</td> <td>The captured data is exported directly to Excel. If a template file that was created in Excel is used, an original report can be created in real time. The template files that were provided as standard accessories can also be used. * EXCEL must be installed to use this function. * Transfer of 32000 points or more is disabled if a graph is used in the template.</td> </tr> </table>	Save as CSV batch files	The data is saved as CSV batch files.	Export to direct Excel file	The captured data is exported directly to Excel. If a template file that was created in Excel is used, an original report can be created in real time. The template files that were provided as standard accessories can also be used. * EXCEL must be installed to use this function. * Transfer of 32000 points or more is disabled if a graph is used in the template.
Save as CSV batch files	The data is saved as CSV batch files.					
Export to direct Excel file	The captured data is exported directly to Excel. If a template file that was created in Excel is used, an original report can be created in real time. The template files that were provided as standard accessories can also be used. * EXCEL must be installed to use this function. * Transfer of 32000 points or more is disabled if a graph is used in the template.					
6	Configure CSV file: Daily report	This parameter is used to specify the save destination for the Daily report.				
7	Configure CSV file: Monthly report	This parameter is used to specify the save destination for the Monthly report.				
8	Template file	The template file settings for the Export to Direct Excel File function are made here. Files with the ".xlt" and ".xls" extensions can be used. Template files are provided as standard in the "Temp" folder that is installed with this software.				
9	Destination sheet	This parameter is used to specify the name of the specified template sheet.				
10	Start cell	This parameter is used to specify the start position on the sheet from which to transfer data.				

No.	Name	Description
11	Switch sheet	When the specified number of points is reached, data is transferred to a different sheet. * When data is transferred to a different sheet, the graph or other element may not work correctly. * EXCEL versions before 2007: Supports display up to Row 65536. * EXCEL 2007 and later versions: Supports display up to Row 1048576. * Transfer of 32000 points or more is disabled if a graph is used in the template.

## 10-5. Other Settings

This screen is used to make various other settings and to display information.

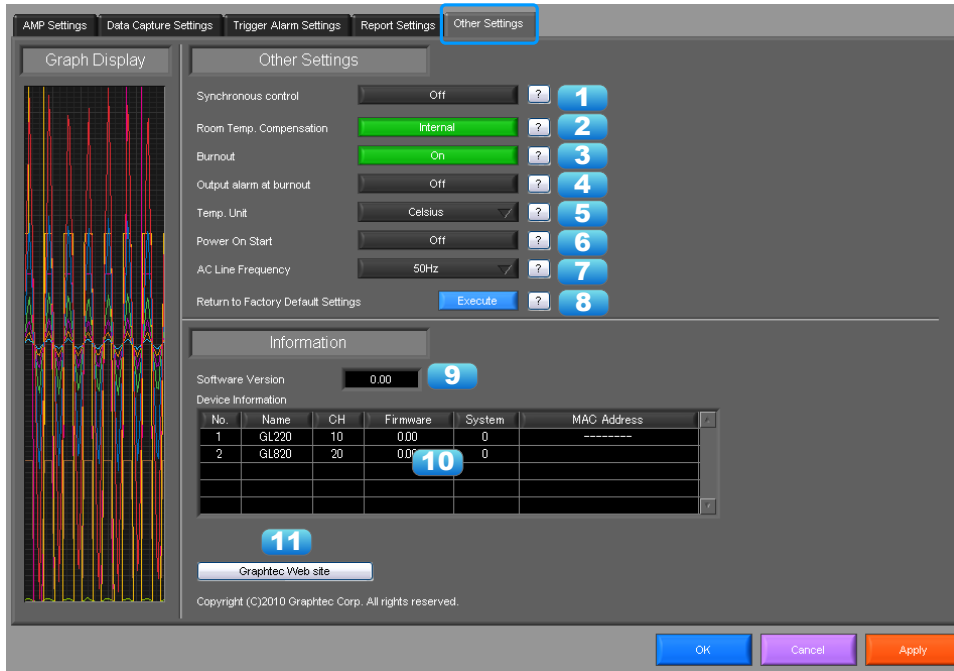


No.	Name	Description
1	Synchronous control	When multiple GL devices are connected, measurement starts on all GL with the synchronous control settings ON once measurement is started on one device. The same is true for finishing a measurement. Trigger and capture settings operate at their own configured values. (Triggers or samplings cannot be synchronized.)
2	Room Temp. Compensation	This parameter is used when thermocouples are used to perform temperature measurement. When using this device for room temperature compensation, select Internal. (Always select Internal for this setting.)
3	Burnout	Set to On to regularly check a thermocouple sensor line break. If a thermocouple is connected parallel with other measurement devices, please set this to Off as it may affect the other devices. When a sensor line break is detected, "BURNOUT" message appears.
4	Output alarm at burnout	When set to On, an alarm is output when a burnout has occurred.
5	Temp. Unit	The display unit can be switched between Celsius and Fahrenheit.
6	Power On Start	Data capture starts automatically as soon as the power to the device is turned on. This setting can only be specified for data capture to the device. If On has been selected, select "Save the settings to the device" when exiting this software.
7	AC Line Frequency	Set the voltage frequency to suit the area where the device will be used. Be sure to select the correct frequency, as an incorrect setting affects the noise reduction capability. The noise on the power source can be eliminated at the following sampling rates: 10 channels or less : 500ms or slower 20 channels or less : 1s or slower 50 channels or less : 2s or slower 100 channels or less : 5s or slower 200 channels or less : 10s or slower

No.	Name	Description
8	Return to Factory Default Settings	Click this button to return the settings to the default values.
9	Software Version	The software version is displayed here.
10	Device Information	Information relating to the connected device is displayed here.
11	Graphtec Web site	Click this button to access the Graphtec web site.


# 11. FILE menu

The FILE menu provides replay, CSV conversion, printing, and screen saving of captured data.

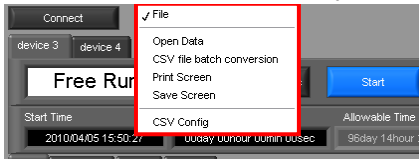

## 11-1. Open Data

Replays data captured to the PC or GL device unit. Select "Open Data" to open the file selection screen (See figure below). Select a file to be replayed.

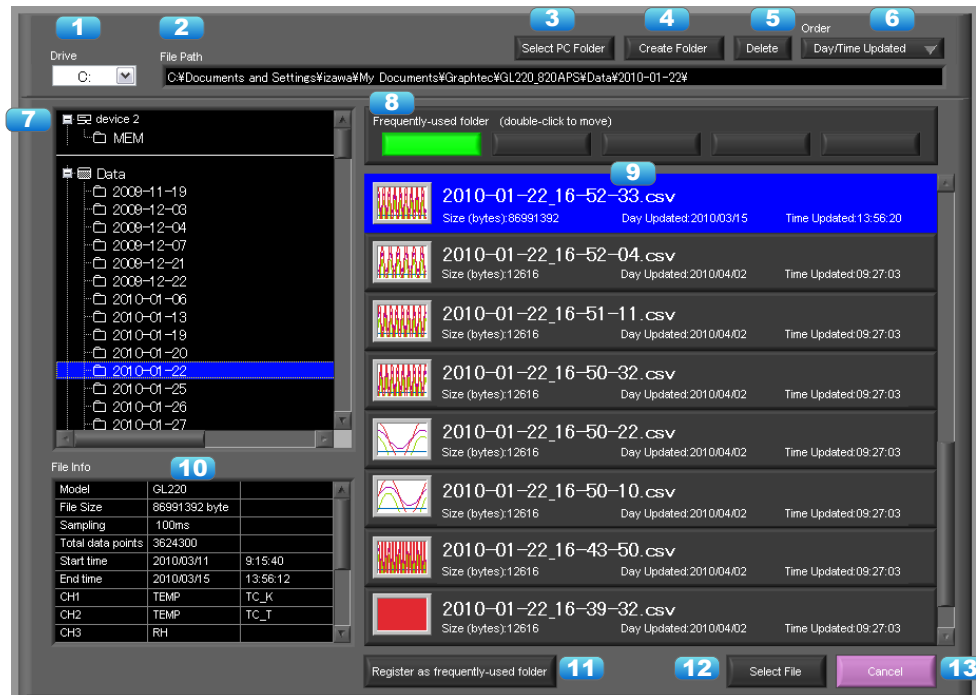


No.	Name	Description
1	Drive	Use this button to select the appropriate PC drive.
2	File Path	The file location is displayed here.
3	Select Folder	Click this button to select the folder that has data files.
4	Create Folder	Click this button to create a new folder.
5	Delete	Click this button to delete the selected file.
6	Order	Use this button to select the file arrangement order.
7	File Tree	The hierarchies of the device are displayed in a tree format. The "Data" is the default location to save files in this application. This is the GL220_820APS folder in the user document folder.
8	Frequently-used folder	Use these buttons to select a frequently-used folder and move the file to that folder. Single click : Select Double click : Move.
9	File List	Files/folders in the current hierarchy are displayed.
10	File Information	When you select binary or text data in the current hierarchy, file information is displayed.
11	Register as frequently-used folder	Click this button to register the currently displayed folder as one of the frequently-used folders. After registering, it is added to Item 5 "Frequently-used folder".
12	Select File	Click this button to select a file (display the file).
13	Cancel	Click this button to cancel the selected file.

Refer to "12. Replay Screen" for details on data replay.



## 11-2. CSV File Batch Conversion


This function enables multiple GBD (binary data) files to be converted in a batch to CSV format files.

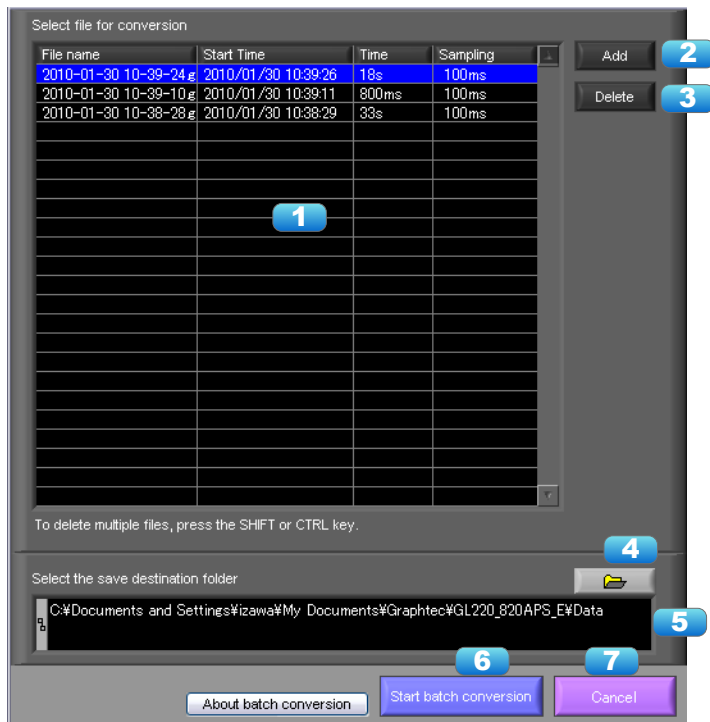

No.	Name	Description
1	List of converted files	The batch-converted files are displayed in a list.
2	Add	Click this button to add a file to the batch to be converted.
3	Delete	Click this button to remove a file from the batch to be converted. With the SHIFT or CTRL key pressed, you can select more than one file.
4	Save destination folder	Select the save destination for the batch-converted files here.
5	Save folder path	Displays the path of the save folder.
6	Start batch conversion	Click this button to start batch file conversion.
7	Cancel	Click this button to cancel the batch conversion operation and close the screen.

## 11-3. Print Screen


Prints the display screen on the printer. Printing is performed at the printer that has been selected as the default printer. If you change the printer, relaunch the software.

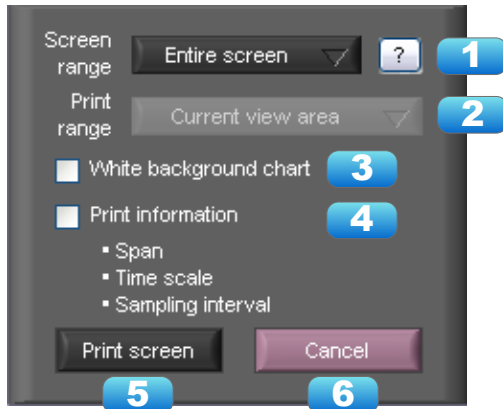

No.	Name	Description		
1	Screen range	Select a screen range to be printed.		
		<table border="1"> <tr> <td>Entire screen</td> <td>Prints all of the displayed screen.</td> </tr> <tr> <td>Waveform only</td> <td>Prints only the waveform graph.</td> </tr> </table>	Entire screen	Prints all of the displayed screen.
Entire screen	Prints all of the displayed screen.			
Waveform only	Prints only the waveform graph.			
2	Print range	Selects a range to be printed. * Selection is available when the scroll is Off during capture, or during data replay.		
		<table border="1"> <tr> <td>Current view area</td> <td>Prints the current view area.</td> </tr> <tr> <td>Between the cursor A and B</td> <td>Prints data between Cursors A and B in the time scale in which it is displayed. If the range is too large, data is printed on more than one sheet.</td> </tr> </table>	Current view area	Prints the current view area.
Current view area	Prints the current view area.			
Between the cursor A and B	Prints data between Cursors A and B in the time scale in which it is displayed. If the range is too large, data is printed on more than one sheet.			
3	White background chart	Prints the waveform graph against a white background.		
4	Print information	Prints the graph with information in it. The information to be printed is the span, Time/DIV, and sampling interval. Not all the channel information may be included depending on the number of channels to be displayed.		
5	Print	Starts printing.		
6	Cancel	Cancels printing.		

## 11-4. Save Screen

To save the displayed screen as a BMP file.

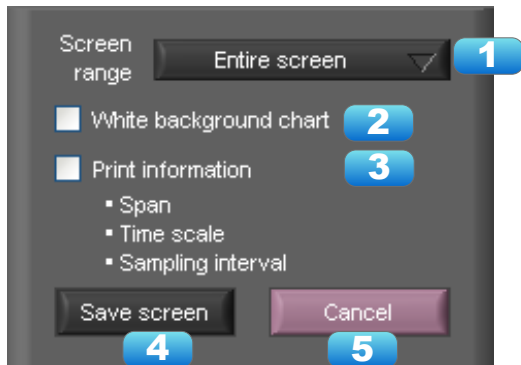


No.	Name	Description	
1	Screen range	Selects a range of the screen to be saved in BMP.	
		Entire screen	Saves all the displayed screen in BMP.
		Waveform only	Saves only the waveform graph in BMP.
2	White background chart	Saves the waveform graph against a white background in BMP.	
3	Print information	Saves the graph with information displayed in it in BMP. The information to be displayed is the span, Time/DIV, and sampling interval. * Not all the channel information may be included depending on the number of channels to be displayed.	
4	Save	Starts saving the screen in BMP.	
5	Cancel	Cancels saving the screen.	

## 11-5. CSV Config

This setting is for the decimal point and the delimiter that are used in the CSV file for output.

Please set according to the setting of OS that actually used.

The CSV file which uses different decimal point and delimiter cannot be opened.

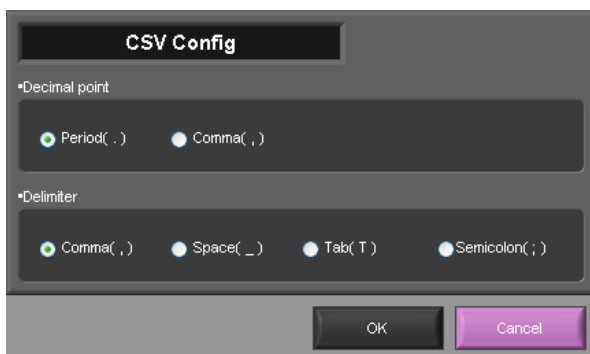

● NOTE

Please set to the delimiter other than the comma (,) if the comma (,) is set to the decimal point.  
Do not set comma (,) to both the decimal point and the delimiter at same time.

# 12. Replay Data

This section explains how to replay data that has been captured.

## 12-1. Y-T



No.	Name	Description	
1	File	Operations related to files are performed.	
		Open Data	Click this button to open the screen for opening files captured to a PC or to the device.
		Open in new window	Opens a file in a new window. This function is useful when you compare captured waveforms.
		Superimpose/Link	For the reviewing data, you can overwrite the waveform of other captured data or link and display the waveform. Refer to section 12-4 for details.
		Convert then Save	Click this button to convert data being replayed into GBD or CSV files and save them. Data cannot be saved during Free Running. Refer to section 12-5 for details.
		Print Screen	Click this button to print out a copy of the displayed screen. Printing is performed at the printer that has been selected as the default printer. If you change the printer, set the printer and then restart the software. Refer to section 11-3 for details.
	Save Screen	Click this button to save the displayed screen as a BMP file.	
2	Capture File Name	The name of the data capture file that is being replayed.	
3	Start Time	The time at which data capture was started.	

4	Capture Time	The data capture time
5	Sampling Interval	The sampling interval * EXT is displayed during external sampling.
6	Close	Click this button to close the replay screen.
7	Alarm	Displays the status of the alarm port on Cursor A. Refer to section 13-1 for details.
8	Display switch	Switches display modes. Refer to the page on each of the display modes for details.
9	Waveform Graph	The waveforms are displayed here.
10	Cursors	Selects which of the cursor values should be displayed in the digital display area. Up to three values (Cursor A, Cursor B, Cursor A-B) can be displayed at the same time.
11	Digital	The digital values are displayed in this area. Clicking on any of the CH numbers enables the waveform for that channel to be hidden/displayed. The channels for which an alarm has been generated are shown in red.
12	Cursor Time	The cursor times are displayed during data capture when Scroll Off has been selected.
13	Scale operations	Click this button to perform various settings for the waveform display. Refer to section 12-6 for details.
14	Scroll bar	Moves waveform. Can also move Cursors A and B. Refer to section 12-7 for details.

## 12-2. Digital

You can select "Digital" tab to switch to the digital display.


The Digital screen is used mainly to perform operations such as statistical calculation using the A and B cursors.



No.	Name	Description
1	Waveform Graph	The waveforms are displayed here.
2	Digital display	The cursor A and B levels, calculation results, and so forth are displayed here.
3	Execute Stat. Calc	Click this button to perform statistical calculation of the data between Cursors A and B.
4	Cursor Time	The cursor A and B times are displayed here.

## 12-3. XY


This function is used to display the data between the A and B cursors in an XY format. (Max 10000 points)

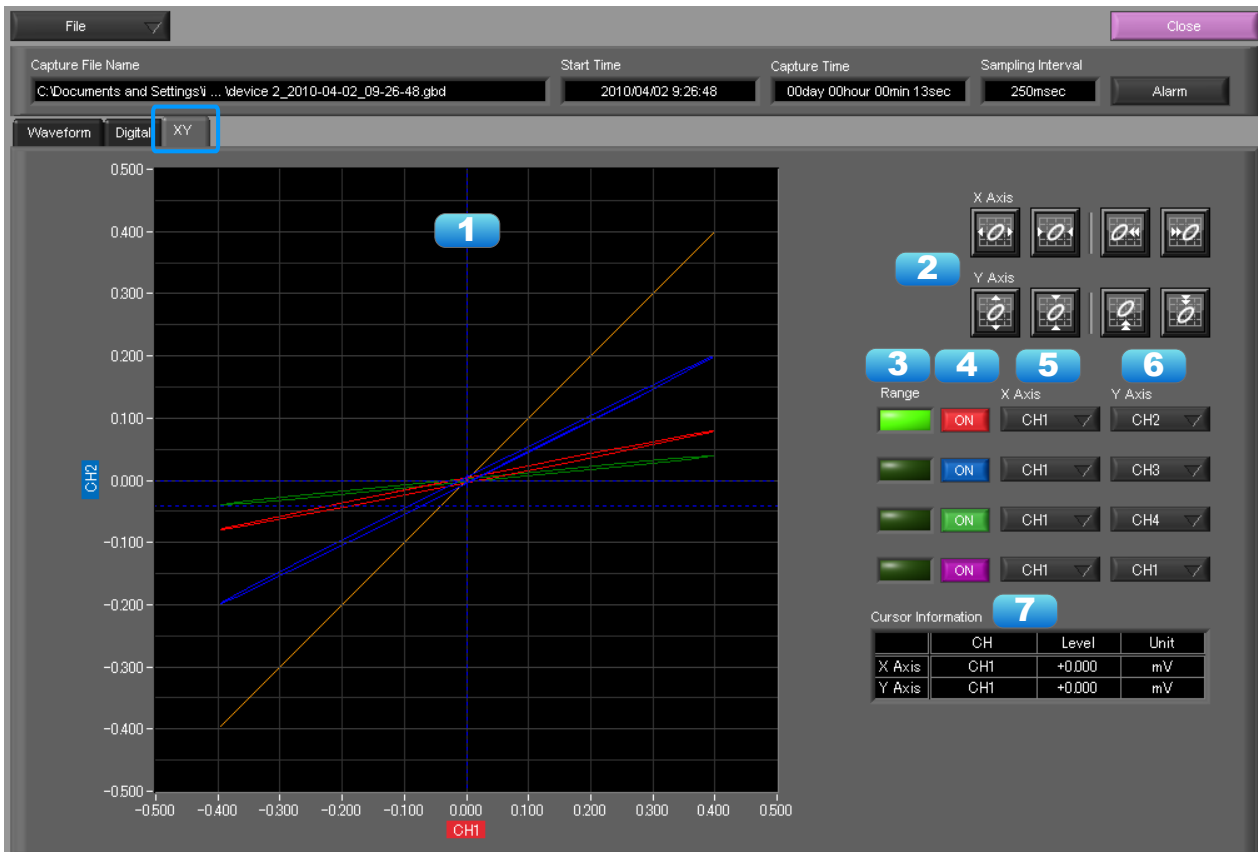

No.	Name	Description
1	X-Y Waveform Graph	The X-Y waveform graph is displayed here.
2	Waveform operation icons	Use these buttons to expand, shrink, or move X and Y axes.
3	Range	These buttons specify display of the scale values for the channels selected for the X and Y axes.
4	On/Off	Click these buttons to specify the display as ON or OFF.
5	X Axis	Use these buttons to select the channels for the X axes.
6	Y Axis	Use these buttons to select the channels for the Y axes.
7	Cursor Information	The cursor levels of the channels for which Range has been specified are shown here.

## 12-4. Superimpose/Link


This function enables multiple files to be superimposed on the display, or to be linked. The data must be captured under the same conditions to be linked.

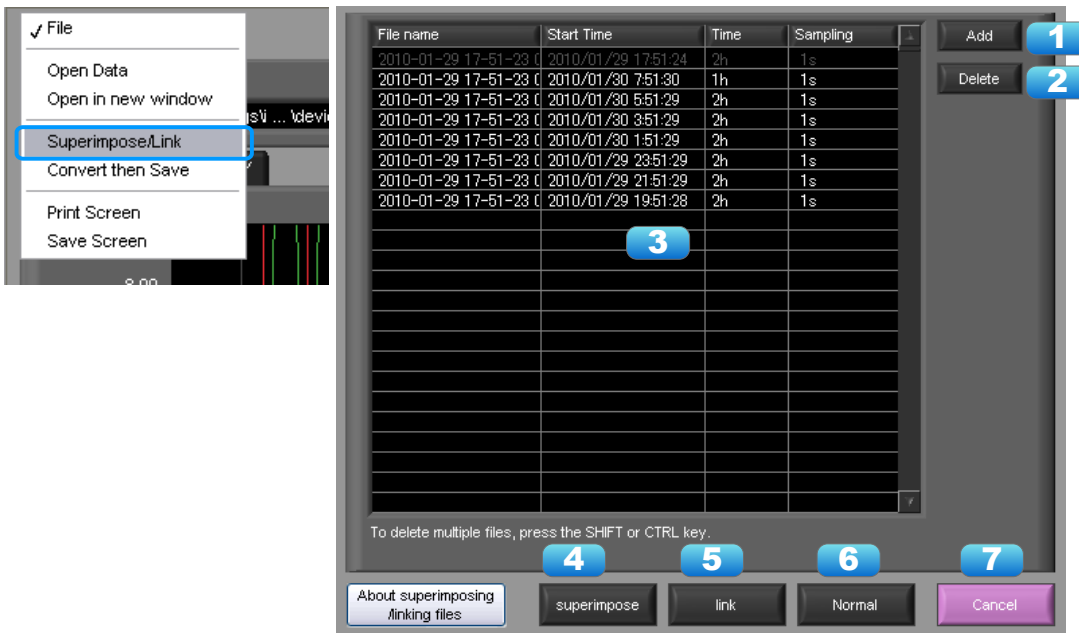

No.	Name	Description
1	Add	Click this button to add a file to those selected for the superimposing or linking operation.
2	Delete	Click this button to delete the added file from the list. With the SHIFT or CTRL key pressed, you can select more than one file.
3	File List	The files added to those selected for superimposing or linking are listed here.
4	Superimpose	Click this button to superimpose files. (* Overlapped data cannot be saved.)
5	Link	Click this button to link files. * Data with different capture conditions cannot be concatenated. When chain the files, the date and time for chained file is displayed based on the date and time of No. 1 file. Therefore the date and time which are for No. 2 and later files may not be same as actual measurement date and time.
6	Normal	Click this button to open the original file without performing any superimposing or linking operations.
7	Calcel	Click this button to close the screen.

## 12-5. Convert then Save


This function is used to convert replayed data to a different format (GBD, CSV), and to clip and save only the data between the cursors.

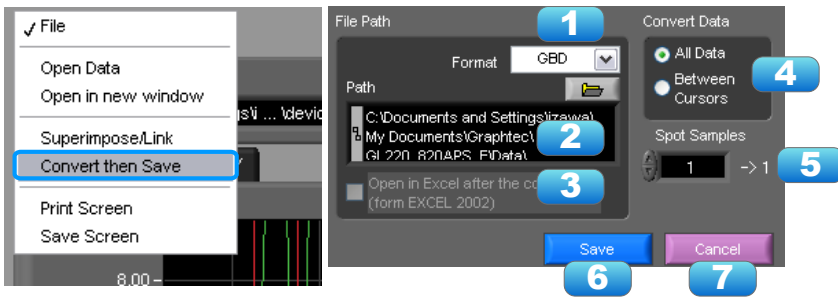

No.	Name	Description				
1	Save format	Select a format to convert and save data. <table border="1"> <tr> <td>GBD</td> <td>binary data * CSV data cannot be converted to binary data.</td> </tr> <tr> <td>CSV</td> <td>text data. This is a file format that can be opened with Microsoft's EXCEL and other software.</td> </tr> </table>	GBD	binary data * CSV data cannot be converted to binary data.	CSV	text data. This is a file format that can be opened with Microsoft's EXCEL and other software.
GBD	binary data * CSV data cannot be converted to binary data.					
CSV	text data. This is a file format that can be opened with Microsoft's EXCEL and other software.					
2	Path	Select a location to which you want to save data.				
3	Open with EXCEL after the conversion	If this setting is selected, a file converted into CSV format is opened with EXCEL. * This setting cannot be selected if data is saved in binary format. * EXCEL must be installed to use this function. * This function is not available with EXCEL 2000 or any previous versions.				
4	Select data to be converted	<table border="1"> <tr> <td>All Data</td> <td>All of the data being replayed is saved.</td> </tr> <tr> <td>Between Cursor</td> <td>Data between cursors A and B is saved.</td> </tr> </table>	All Data	All of the data being replayed is saved.	Between Cursor	Data between cursors A and B is saved.
All Data	All of the data being replayed is saved.					
Between Cursor	Data between cursors A and B is saved.					
5	Spot Samples	Spot samples are extracted when saving data. Ex) 1 → 1 :Spot samples are not extracted. Ex) 2 → 1 :One of two data points is extracted.				
6	Save	Executes conversion and saving.				
7	Cancel	Click to close the screen.				


## 12-6. Scale Operations

Use this area to perform scale operations, enlarge the selected area, etc.

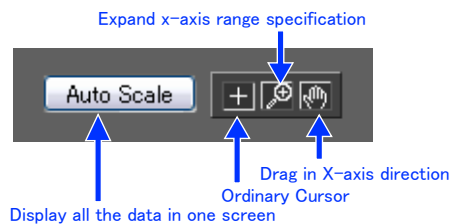

## 12-7. Scroll bar

Allows you to move waveforms and cursors.

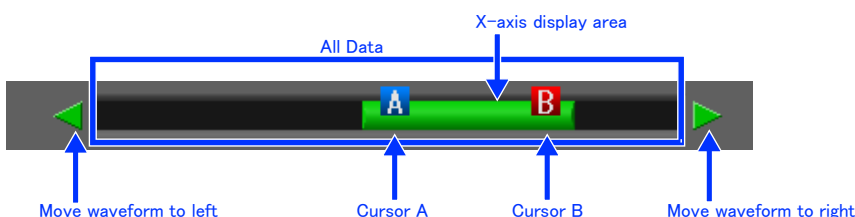





## 13-3. About Icons


Y-T View (Y-T Zoom) provides control icons that allow you to perform intuitive operations. Each of the icons has the following functions:



No.	Name	Description
1	Expand/Shrink Time axis	Expands/Shrinks the time axis.
2	Display	Uses the display width of one screen to display time.
3	Expand/Shrink Y axis span	Expands/Shrinks the Y axis of the selected channel.
4	Move Y axis position	Click this icon to move up and move down the Y axis position for the selected channel.
5	Waveform Operation	Click this icon to open the screen to edit graph waveforms. Refer to section 13-3-1 for details.
6	Displays Cursor	Displays Cursor A/B in the waveform display.
7	Comment	Allows you to enter a comment on a waveform of a desired channel during capture or replay. The entered comment will be redisplayed when the file is opened again. Refer to section 13-3-2 for details.
8	Cursor direction switching	Switches the vertical and horizontal sides of a cursor.
9	Move/Search	During replay, click this icon to open the screen to move to the desired time or points and to search at any level. Refer to section 13-3-3 for details.
10	Switch Scale	Click this icon to switch between a relative time and an absolute time. Fixed to a point while external sampling setting is used. * Disables selection of absolute time in Free Running status.

### 13-3-1. Waveform Operation

Various types of waveform operations can be performed.

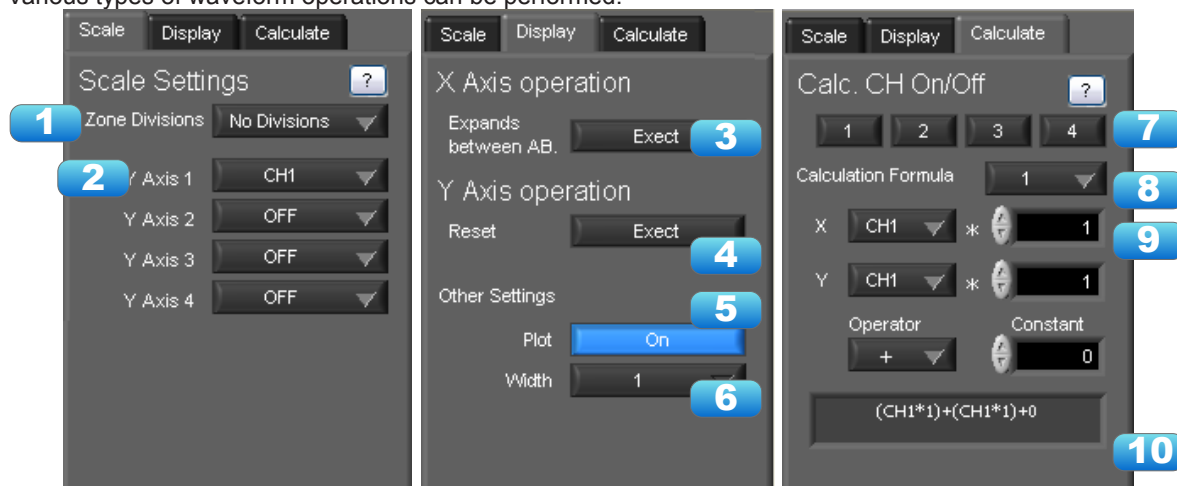

No.	Name	Description
Scale		
1	Zone Divisions	Divide the Y-T waveform graph into the upper side and the lower side. (No Divisions/2 Divisions/5 Divisions/10 Divisions)
2	Y Axis	When "Zone Divisions" is set to "No Divisions", up to four Y axis ranges can be displayed.

Display		
3	Expands between A-B	Expands data between Cursors A and B when the scroll is stopped during capture, or during replay. * The expansion in the Y-axis direction is not available.
4	Y Axis Operation Reset	Click this button to revert the values set in the Y axis span and position to the default values. The default values are the same values as those of when switching the ranges.
5	Plot	Click this button to display plot marks at the actual sample points on the waveforms.
6	Line Width	Change the line width of the waveforms.(1/2/3/4/5) * The line may be thicker than the selected number of dots due to circumstances regarding input signals.
Calculation		
7	Calculation CH On/Off	Use these buttons to set calculations 1-4 to On/Off. On : Calculation results are shown as waveforms and digital values. Off : Do not perform calculations.The calculation results are only shown in Y-T display, and do not affect the captured data.
8	Calculation channel X/Y	Sets the calculation channel for which calculation is to be set (* The unit conforms to CH X.)
9	Calculation Formula	Use this button to set the variable for a linear expression between channels. $A \cdot CH X + B \cdot CH Y + C$ The expression you set appears at the bottom of this window. (A and B are arbitrary coefficients. * is an arithmetic operation (+-x+). X and Y are arbitrary channels, and C is an arbitrary constant.)
10	Expression	Displays the calculation specified in the Expression setting.

### 13-3-2. Input Comments

Click this icon to input a comment above the waveform of the desired channel during a data capture (replay) operation. If the scroll is ON, the input position is at the "Comment Input" in the upper part of a waveform. If the scroll is OFF, it is the position of Cursor A.



No.	Name	Description
1	CH	Select a channel for entering a comment.
2	Comment input/select	Enters a comment. Up to 20 comments can be entered. If you change a position where a comment has already been entered, the entered comment will also be changed.
3	Input	Click this button to input the comment..
4	Delete	Click this button to delete the comment that was input

#### ● CHECKPOINT

Comments will be displayed based on the scale specified at the start of the data capture operation.If the Y-axis scale is changed during data capture, the input comments will be off positioned when displayed on the replay screen. To display the comments above the waveform, change the Y-axis scale after the replay.

### 13-3-3. Move/Search

During replay, cursor A and the waveforms can be moved to the desired position. You select how to move them and perform the operation with the "Move" tab.



No.	Name	Description
<b>Search</b>		
1	CH	Use this button to select the CH to be searched.
2	Slope	Use this button to select the slope to use for performing the search. H : Search for a rising signal. L : Search for a falling signal.
3	Level	Use this button to set the search level.
4	Prev./Next Search	Performs analog search. The judgment criteria of search is an edge. • Find Previous: Search in the past direction • Find Next: Search in the future direction
5	Alarm	This parameter is used to specify the alarm port number. This setting is not available for GL200A.
6	Generated/Cleared	Use this button to set the alarm status in which searches are performed. Generated : Performs search when an alarm is generated. Cleared : Performs search when an alarm is cleared.
7	Prev./Next Search	Performs alarm search. The judgment criteria of search is an edge. • Find Previous: Search in the past direction • Find Next: Search in the future direction
<b>Move</b>		
8	CH	Use this button to select the CH to be moved.
9	Search Max/Min	Searches for the maximum and minimum values of the specified channel. • Find Maximum: Searches for the maximum value. • Find Minimum: Searches for the minimum value.
10	Search in absolute time	Search the specified time/date. * This function is not available for external sampling data.
11	Search in relative time	Search the specified time. The searched time is the relative time from when data capture was started. * This function is not available for external sampling data.

# 14. Operating Procedure

This chapter describes the basic operating procedure.

The operating procedure starts with the software and the device in the connected status.

For the connection procedure, see Section 9, "Connecting to a PC (Personal Computer)".


The settings that are not addressed in the following sections are the factory default settings.

## 14-1. Capture Settings

Description


1	Settings related to AMP	CH1: Input = TEMP, Range = TC-K, Filter = Off, Scaling = Off CH2: Input = DC, Range = 1V, Filter = Off Set to other channels to Off.
2	Settings related to data capture	Sampling Interval = 1sec Device Capture Destination: Internal Memory PC Capture Format: Binary Data

After connecting to the device, press the "Capture Settings" button on the main screen.

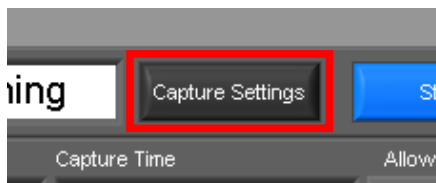

### 14-1-1. Settings related to AMP


The settings for CH1 and CH2 are made according to the setting options. Set other channels to "Off".

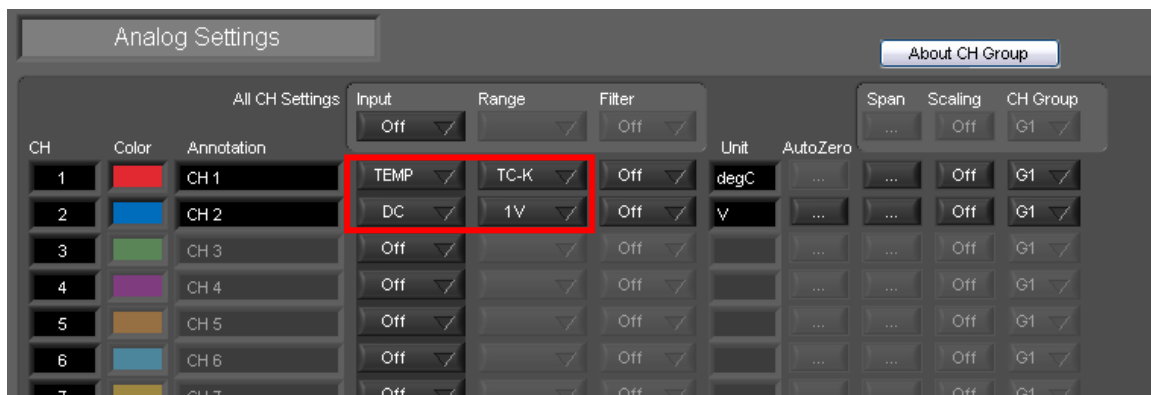

## 14-1-2. Settings related to data capture

The settings related to data capture are made according to the setting options.

- Select the "Data Capture Settings" tab.
- Set "Sampling Interval" to 1sec.
- Sets the device capture setting of this unit to On.
- Set "Format" of "PC Capture Settings" to "Binary Data(GBD)".

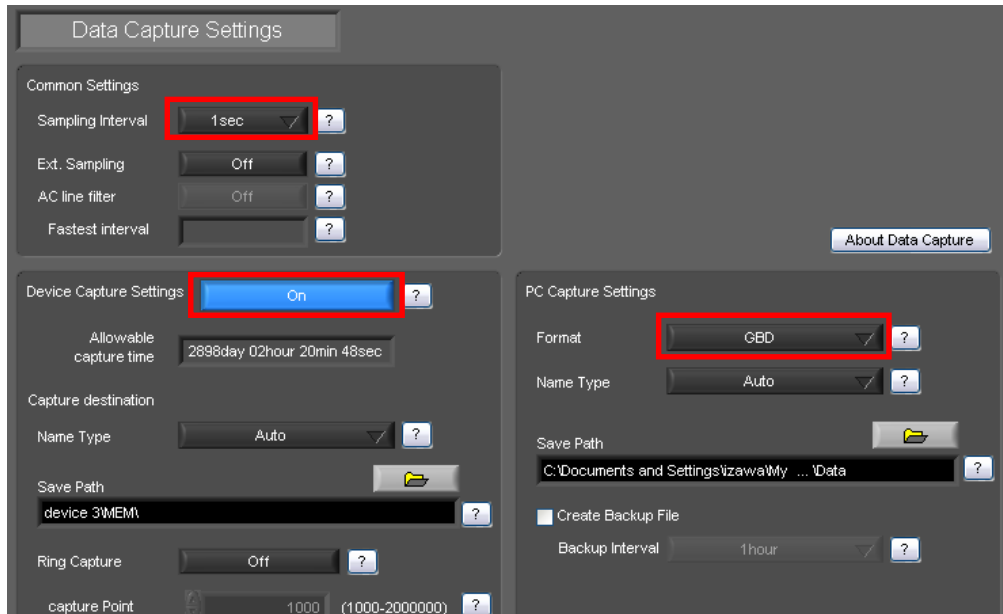

With the above setting, data is saved to the internal memory and PC at the sampling interval of 1 second.


## 14-2. Start

Click the "Start" button to start capturing actual data.



### 14-2-1. Displaying Past Data during a Data Capture Operation

If Off is selected for the waveform "Scroll" button during a data capture operation, past data can be viewed.

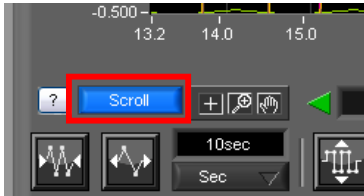

The scrolling operation will be halted, enabling past data to be displayed in the scroll bar.

Moreover, moving the cursors enables the cursor level values to be viewed.

To return to the waveform scrolling operation, click the "Scroll" button once again.



## 14-3. Stop

Click the "Stop" button. Data capture stops, and the device returns to the Free Running status.



When capture ends, the screen automatically switches to the replay status.


## 14-4. Replay Data

Replays data captured to the PC or this unit. Data captured using either this software or this unit can be replayed. The formats supported for replay are binary data (GBD) and text data (CSV).


This section describes replaying binary data captured to the PC and performing basic operations.

### 14-4-1. Replaying File

In the "File" on the main screen, select the "Open Data".

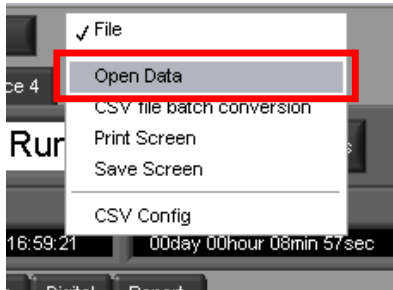


The screen to select a file opens. Select a file from the location where it is saved, and press the "Select".

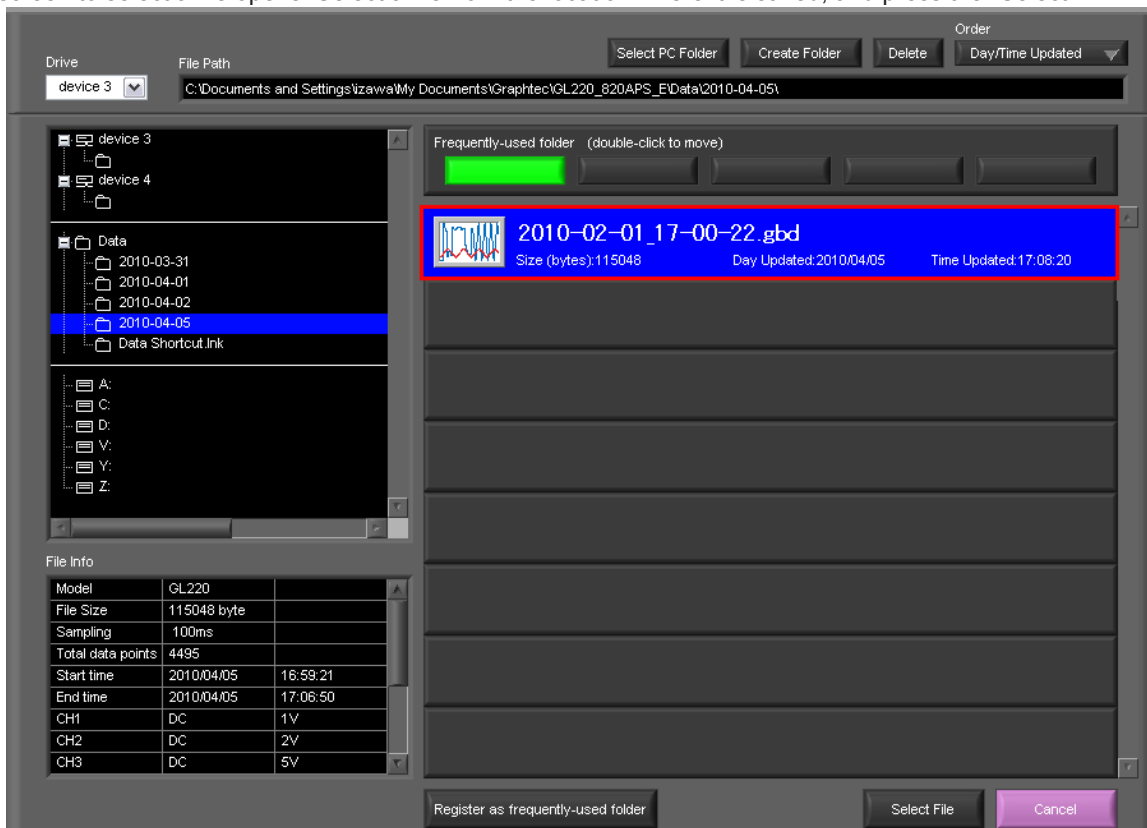



## 14-4-2. Waveform display

The selected file is read, and the waveforms are displayed.

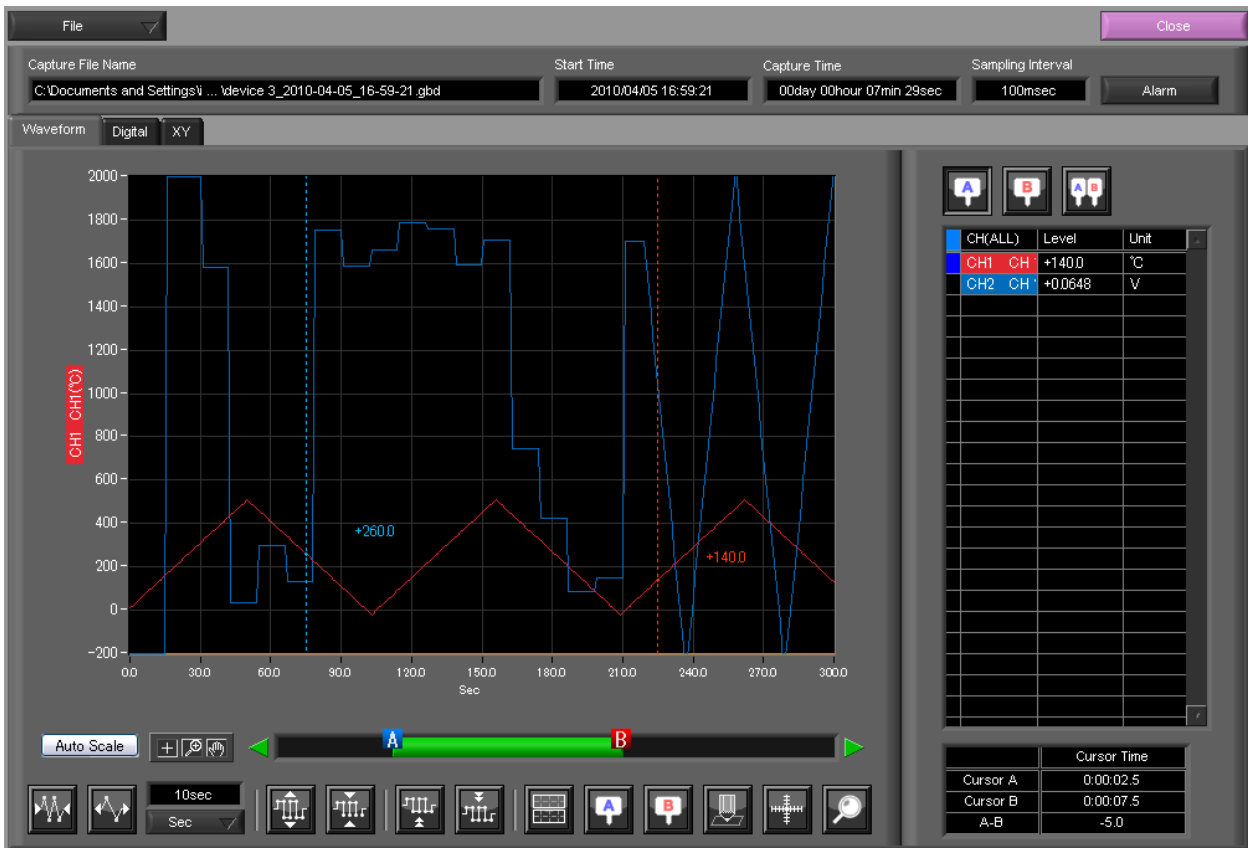


## 14-4-3. Cursor Operations

During replay, two cursors A and B are provided and can be moved to any position in the waveforms.

You can drag the cursors on the waveforms to move them.

Also, you can use the icon of the scroll bar to move them.


Also, if the rectangle shaped button which is located at left/right edge of the scroll bar, the scroll is done in 1 div step.

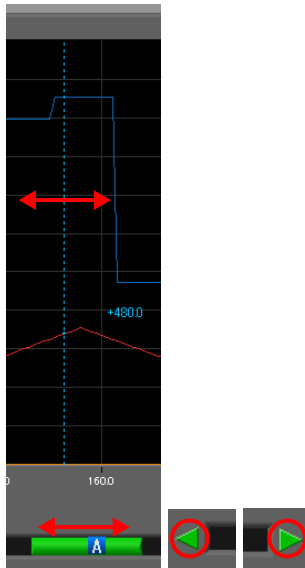


#### 14-4-4. Input Comments

A comment can be input at the position above the desired channel of cursor A.  
The input comment will be saved even after a file is closed. Next time the file is open, it is displayed in the same location.  
(Only when the data is captured to the PC).


Select the "Comment" icon.



Here, we will input a comment "Check" above the waveform for CH1.  
After you input the string, press the "Input" button.

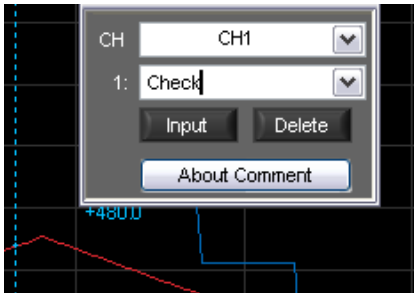

Now, the comment is input.

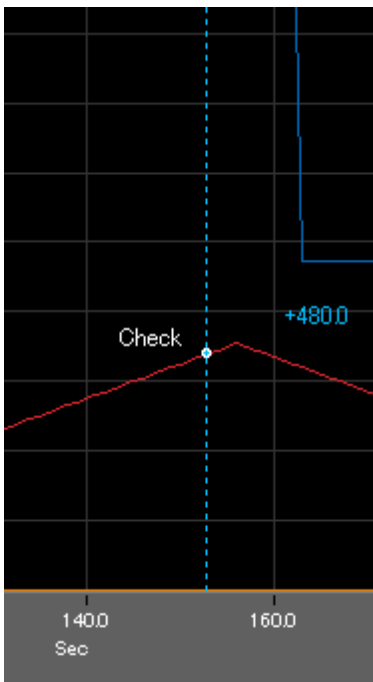

## 14-4-5. Data Search

Search is performed to check the location where data is above/below the specified value. Then, a cursor and waveforms are moved to the location.


Here, we will search for a rising signal and the location above 0V for CH2.

Select "Move/Search" icon.



1. Set CH to CH 2.
2. Set the search conditions to "Hi" (rising signal).
3. Input 0V.
4. Press the "Next Search" to search the current cursor in the forward direction.

The location above 0 V is located, and cursor A and the waveform are moved.

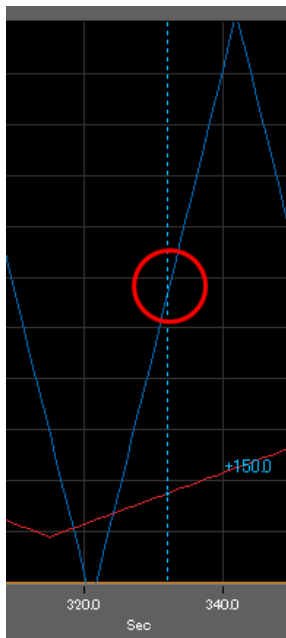

# GRAPHTEC

•Specifications are subject to change without notice.

---

GL220\_820 Application Software User's Manual  
APS (GL220\_820) -UM-151  
May. 1, 2010  
GRAPHTEC CORPORATION

---